



**To change Pull Through, turn the Tensioning Nut. Tighten against spring to increase Pull Through, loosen to decrease Pull Through.**

**When the Cable is gripped (Hammer Head down as shown) the gap between Hammer Head and Grip should be not less than 3/32" and no greater than 1/8". The corresponding gap between the Hammer Pivot and the Hammer Shaft should equal this gap, but may be greater by 1/32".**

**Note; if replacing the Hammer Head of a 205 or 206 Governor, parts necessary are 207-005, 207-039, & 201-019.**

| YOUR GOVERNOR IS: | YOUR CABLE DIAMETER IS: | HAMMER HEAD PART NUMBER | GRIP PART NUMBER | HAMMER PIVOT ASSEMBLY, 500 lb PULL THRU OR LESS | HAMMER PIVOT ASSEMBLY, 501 lb PULL THRU OR GREATER |
|-------------------|-------------------------|-------------------------|------------------|---|--|
| 201 or 202        | 3/8"                    | 201-005                 | 201-012          | 201-039-1                                       | 201-039  |
|                   | 7/16"                   | 201-005-1               | 201-012-1        |   |  |
|                   | 1/2"                    | 201-006                 | 201-013          |   |  |
| 207               | 3/8"                    | 207-005                 | 205-012          | 207-039   | 207-039  |
| 208 or 209        | 3/8"                    | 208-005                 | 208-012          | 208-039-1                                       | 208-039  |
|                   | 7/16"                   | 208-005-1               | 208-012-1        |   |  |
|                   | 1/2"                    | 208-006                 | 208-013          |   |  |