



A **VANTAGE** Company

GLV-40D1 Gearless Machine Instruction Manual (#1194)



© Hollister-Whitney Elevator Co. LLC

#1 Hollister-Whitney Parkway

Quincy, IL 62305

Phone 217.222.0466 • Fax 217.222.0493

4/10/2024



This installation and service manual is intended for the use of qualified and authorized elevator personnel ONLY. For your safety and the safety of others, do not attempt ANY procedure that you are not qualified and authorized to perform. Recommended procedures must be done in accordance with the applicable rules of the latest edition of the National Electrical Code; the latest edition of ASME A17.1; and all governing local codes. Every attempt has been made to ensure that this guide is accurate and up to date. Hollister-Whitney Elevator Co. LLC assumes no liability for consequences resulting from any error or omission. Please notify Hollister-Whitney Elevator Co. LLC regarding any difficulties with this guide.

Contents

1	Introduction.....	1-1
1.1	Description.....	1-1
1.2	Warranty Information	1-1
2	Safety Precautions	2-1
2.1	Terms in This Manual	2-1
2.2	General Safety.....	2-1
2.3	Electrical Safety	2-1
2.4	Electrical Hazards.....	2-2
2.5	Mainline Disconnect.....	2-2
2.6	Test Equipment Safety.....	2-2
2.7	When Power Is On.....	2-2
2.8	Product Specific Warnings.....	2-2
3	Arrival of the Equipment	3-1
3.1	Receiving	3-1
3.2	Data Tag.....	3-1
3.3	Handling.....	3-1
3.4	Hoisting.....	3-2
3.5	Storage	3-2
3.6	Moisture, Condensation	3-3
4	Application.....	4-1
4.1	Overview.....	4-1
4.2	Codes and Standards	4-2
4.3	Environmental Specifications.....	4-2
4.4	Machine Specifications	4-2
4.5	Brake Specifications	4-4
5	Installation	5-1
5.1	Machine Mounting.....	5-1
5.2	Electrical Connection	5-2

5.3 Brake Adjustment..... 5-5

5.4 Brake Burnishing..... 5-9

5.5 Encoder Connection 5-9

5.6 Startup5-10

5.7 Manual Brake Release.....5-11

6 Maintenance 6-1

6.1 General..... 6-1

6.2 Cleaning..... 6-1

6.3 Bearings..... 6-2

6.4 Brake Wear 6-3

6.5 Other Items 6-4

7 Replacement 7-1

7.1 Encoder Replacement 7-1

7.2 Brake Replacement 7-7

Section

1

1 Introduction

1.1 Description

Thank you for choosing the Hollister Whitney Elevator Company (HWEC) GLV-40D1 Gearless Machine!

The GLV-40D1 machine has been designed for use in 1:1 roped, machine room applications with VVVF controls. The machine is designed with 30 poles to provide smooth, quiet, and long-lasting operation.

HWEC machines are designed to perform in a tolerant machine space. The machine space working temperature should be held between 35° F & 104° F, (1.7° C & 40° C) and humidity should be held to an average of 90% non-condensing.

1.2 Warranty Information

All parts and equipment manufactured by HWEC are guaranteed against defects in material and workmanship for a period of one (1) year from the date of shipment.

Warranty covers only the repair or replacement of parts, F.O.B. our factory, upon determination by inspection at our factory that warranty is applicable.

Equipment and components not of our manufacture are warranted only to the extent of the original manufacturer's warranty.

Our warranty specifically does not include any other incidental liability or expense such as transportation, labor, and unauthorized repairs.

Section

2

2 Safety Precautions

Read this section before any work is performed on elevator equipment.

*** IMPORTANT –**

The procedures contained in this manual are intended for the use of qualified elevator personnel. In the interest of your personal safety and the safety of others, do NOT attempt ANY procedure that you are NOT qualified to perform.

All procedures must be done in accordance with the applicable rules in the latest edition of the National Electrical Code; the latest edition of ASME A17.1; and any governing local codes.

2.1 Terms in This Manual

⚠ CAUTION:

Caution statements identify conditions that could result in damage to the equipment or other property if improper procedures are followed!

⚠ WARNING:

Warning statements identify conditions that could result in personal injury if improper procedures are followed!

2.2 General Safety

Specific warnings and cautions are found where they apply, and DO NOT appear in this summary.

2.3 Electrical Safety

All wiring must be in accordance with the National Electrical Code and must be consistent with all state and local codes.

2.4 Electrical Hazards

Electric shocks can cause personal injury or loss of life. Circuit breakers, switches and fuses may NOT disconnect all power to the equipment. Always refer to the wiring diagrams. Whether the A/C supply is grounded or not, high voltage will be present at many points.

2.5 Mainline Disconnect

Unless otherwise suggested, always turn OFF. Lock and tag out the mainline disconnect to remove power from the equipment.

2.6 Test Equipment Safety

Always refer to manufactures' instruction book for proper test equipment operation and adjustments.

Megger testing, or buzzer type continuity testers, can damage electronic components. Connection of devices such as voltmeters on certain low-level analog circuits may degrade electronic system performance. Always use a voltmeter with a minimum impedance of 1M Ohm/Volt. A digital voltmeter is recommended.

2.7 When Power Is On

Dangerous voltages exist at several points in some products. To avoid personal injury, do NOT touch exposed electrical connections or components while power is On.

2.8 Product Specific Warnings

WARNING

GLV-40D1 machine MUST be balanced during hoisting. See paragraph 3.4 for proper lifting configurations.

WARNING

Hang the elevator car before removing ANY bolts. Failure to do so may result in severe injury and equipment damage.

Section

3

3 Arrival of the Equipment

3.1 Receiving

Immediately upon arrival of the machine, make a visual check for any external damage. If any damage incurred in transit is found, make notice of the claim in the presence of the carrier, and notify HVEC. If necessary, do not put these machines into operation without first consulting HVEC.

If the machine has gotten wet during transportation, make notice of the claim in the presence of the carrier and notify HVEC. See also Section 3.6.

3.2 Data Tag

Check the machine data tag to ensure the machine conforms to your order.



 PMAC ELEVATOR TRACTION MACHINE RATINGS 			
A VANTAGE Company MANUFACTURED IN COOPERATION WITH SHENYANG BLUELIGHT DRIVE TECHNOLOGY CO., LTD 155941 C US			
MODEL	SUSPENSION	POWER (hp/KW)	MAX. AMBIENT TEMP (°C)
CONTRACT/SERIAL NO.	NUMBER OF POLES 30	FREQUENCY (Hz)	INSULATION CLASS F
CAR SPEED (fpm)	TORQUE (ft-lbs)	VOLTS (V) / PHASES	ELEVATOR DUTY (%) 50
CAR CAPACITY (lbs)	ROTATIONAL SPEED (rpm)	CURRENT (A)	MACHINE WEIGHT (lbs)



Figure 1

3.3 Handling

The machine will be delivered on a wooden pallet. It can be left on the pallet and moved with a standard fork truck or pallet jack.

3.4 Hoisting

The machine weighs about 5300 pounds (2410 kg). When removing the machine from the pallet, it must be lifted using the lifting holes provided at the bottom of the machine.

When lifting the machine, use a spreader beam or other suitable rigging device to pull straight up on the lifting holes.

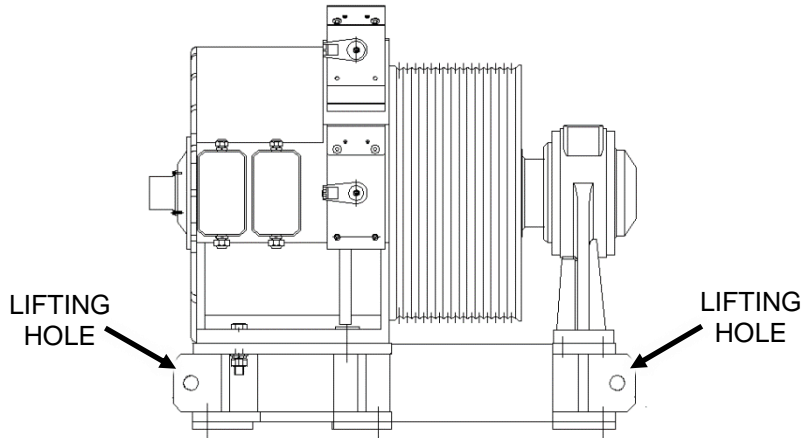


Figure 2

WARNING

Use only the lifting holes when lifting the machine! Do not use any other machine component to lift the machine! Lifting the machine by any other component will result in damage to the machine or possible failure of the component resulting in the machine falling from the hoisting system!

Follow all the necessary precautions to avoid damage to the machine or risk to personnel when moving or hoisting the machine.

3.5 Storage

During storage in a warehouse or on the elevator job site, precautions must be taken to protect the machine from dust, dirt, moisture, metal shavings and temperature extremes.

For short term storage, place the machine in a warm, dry, and clean environment.

Protect the machine from harsh weather conditions and temperature variations that can lead to condensation.

Protect from dust and metal shavings. Metal dust and shavings can be attracted into the machine by the magnets.

For longer term storage, follow the recommendations above plus; place the machine in a sealed, waterproof enclosure. Add a dehydrating packet that is sized for the enclosure's volume and humidity level.

3.6 Moisture, Condensation

Before installing the machine, and before any voltage is applied, check the machine for condensation, or any evidence of moisture or water. If any evidence of wetness is found, contact HWEC for drying instructions.

After the machine has been dried per factory instructions, it will be necessary to verify the insulation between each coil phase and earth ground. Using an insulation tester (or megohmmeter) check the insulation resistance at 500VDC. The resistance should be NO LESS than 100 Mohm.

Section

4

4 Application

4.1 Overview

The GLV-40D1 series machine is a synchronous permanent magnet gearless machine designed for elevators. The machine has 30 poles to provide smooth, quiet, and long-lasting operation. Its configuration allows elevator capacity up to 4000 lbs. with 1:1 roping, double wrap arrangement at 50% counterbalance with up to a 39,600 lb shaft load (19800 lb system load). See Section 4.4 below for complete specifications. The overall system load is calculated by adding the following items:

Empty Car Weight + Counterbalance Weight + Capacity + Hoist Rope Weight + Compensation Weight + Traveling Cable Weight

The GLV-40D1 machine brake system uses four block brakes.

The latest HWEC manuals, bulletins and procedures are available for download from the HWEC website.

The following is a list of major components of the GLV-40D1 machines. Along with a description of their functions, there is an overview of some of the critical adjustments and maintenance information. See Installation and Maintenance for detail.

1. **PM Motor Housing** - The housing contains the PM windings used to provide the necessary torque and speed to move the elevator in operation.
2. **Traction Sheave** – A grooved sheave is connected directly to the machine rotor. The grooves provide traction between the sheave and the hoist ropes.
3. **Brake** – The electromechanical device is used to prevent the elevator from moving when the car is at rest.
4. **Sheave Guard/Rope Retainer** – Provides rope retention and keeps hoist ropes away from contact after rope installation.
5. **Machine Rotor & Brake Wheel** – The brake wheel is connected to the main shaft. When the brake is energized, the brake is released from the brake wheel.
6. **Nameplate** - Displays the machine rated data and manual factory contact/serial number information.
7. **Encoder** – (Behind Cover) This device is directly coupled to the rotor of the machine. It is provided to give the absolute speed feedback of the hoist motor to the inverter drive system and to the elevator controller.

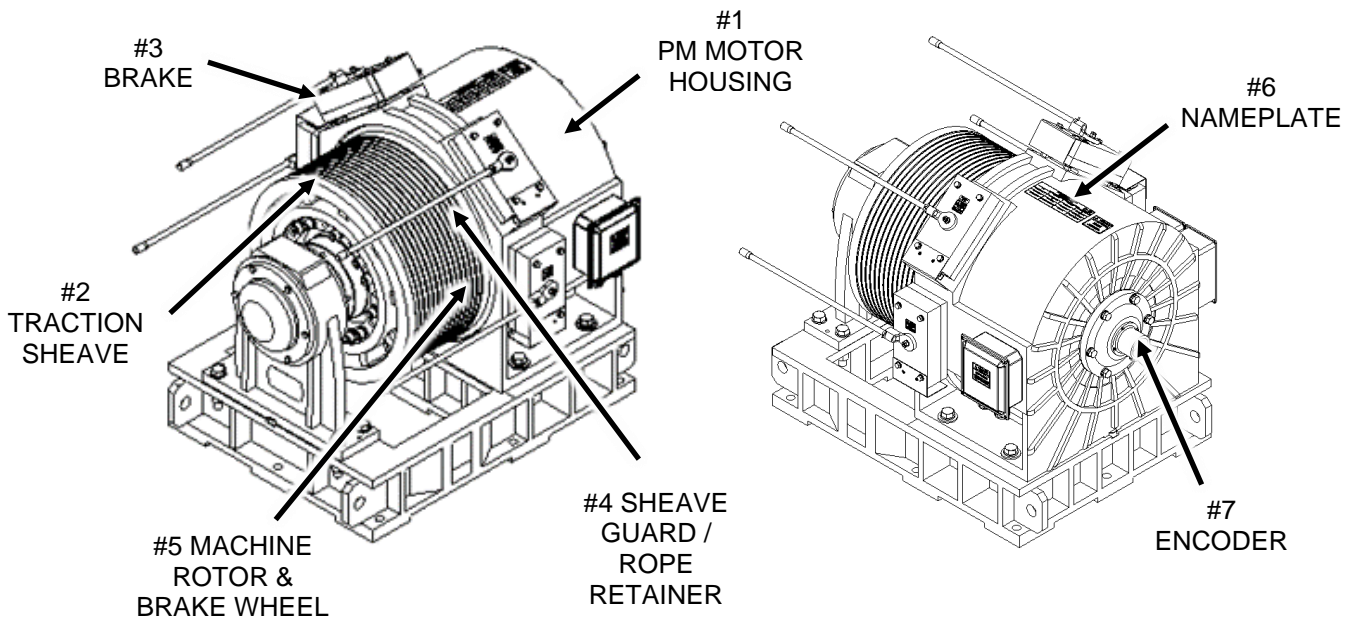


Figure 3

4.2 Codes and Standards

These machines are designed to comply with ASME A17.1/CSA B44 code. The motors are designed with insulation class F minimum and have been approved by and carry a CSA approved label.

4.3 Environmental Specifications

- Operating ambient temperature: 35° F to 104° F (1.7 C to 40 C)
- Humidity average of 90% non-condensing

4.4 Machine Specifications

- Traction Sheave (removeable) Diameter: 20 in or 25 in.
- Main and emergency block brakes. Each capable of holding 125% of the load.
- Brake switches, wired normally close standard.
- Heidenhain ECN1313 2048 encoder and 1.5-meter-long cable (standard)
- Sheave guard/rope retainer.
- Machine dimensions and parts list can be found at the end of this book.

HW Ordering Part #	Supplier Part #	1/2" GROOVE PROFILE MACHINE: 380V, 25" Wheel, 1:1 Double Wrap Up to 4,000# Capacity, Up to 800 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5100#										Motor/Winding Specification									
		Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Rated Voltage (V)	Rated Current (A)	Rated Torque (ft-lb)	Rated Torque (Nm)	Estimated Efficiency (%)	Estimated BTU/hr		Estimated Torque (ft-lb)	Estimated Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	
GLV-40D1-D-V401C	WYT-V1D-2.0EFD635-V401B	2000	300	12.2	9.1	30	45.8	380	228.8	11.5	26.5	63.6	85.9	91.6%	2597	831	1398	2796	50	25	WTF-V1D.1.1-V401B
		3000	350	14.2	10.6	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2998	895	1398	2796	50	25	WTF-V1D.1.1-V401B	
		4000	400	16.3	12.1	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25	WTF-V1D.1.1-V401B	
		5000	450	18.4	13.6	30	69	380	343.1	17.2	26.5	63.6	93.1%	3405	1017	1398	2796	50	25	WTF-V1D.1.1-V401B	
		6000	500	20.5	15.1	30	77	380	381.2	19.1	26.5	63.6	93.5%	3806	1073	1398	2796	50	25	WTF-V1D.1.1-V401B	
		7000	550	22.6	16.6	30	85	380	419.3	21.0	26.5	63.6	93.9%	4207	1129	1398	2796	50	25	WTF-V1D.1.1-V401B	
		8000	600	24.7	18.1	30	93	380	457.4	22.9	26.5	63.6	94.3%	4608	1185	1398	2796	50	25	WTF-V1D.1.1-V401B	
		9000	650	26.8	19.6	30	101	380	495.5	24.8	26.5	63.6	94.7%	5009	1241	1398	2796	50	25	WTF-V1D.1.1-V401B	
		10000	700	28.9	21.1	30	109	380	533.6	26.7	26.5	63.6	95.1%	5410	1297	1398	2796	50	25	WTF-V1D.1.1-V401B	
		11000	750	31.0	22.6	30	117	380	571.7	28.6	26.5	63.6	95.5%	5811	1353	1398	2796	50	25	WTF-V1D.1.1-V401B	
GLV-40D1-D-V402C	WYT-V1D-3.5EFD635-V402B	2000	300	14.2	10.6	30	45.8	380	228.8	11.5	26.5	63.6	85.9	91.6%	2597	831	1398	2796	50	25	WTF-V1D.1.1-V402B
		3000	350	16.3	12.1	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2998	895	1398	2796	50	25	WTF-V1D.1.1-V402B	
		4000	400	18.4	13.6	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25	WTF-V1D.1.1-V402B	
		5000	450	20.5	15.1	30	69	380	343.1	17.2	26.5	63.6	93.1%	3405	1017	1398	2796	50	25	WTF-V1D.1.1-V402B	
		6000	500	22.6	16.6	30	77	380	381.2	19.1	26.5	63.6	93.5%	3806	1073	1398	2796	50	25	WTF-V1D.1.1-V402B	
		7000	550	24.7	18.1	30	85	380	419.3	21.0	26.5	63.6	93.9%	4207	1129	1398	2796	50	25	WTF-V1D.1.1-V402B	
		8000	600	26.8	19.6	30	93	380	457.4	22.9	26.5	63.6	94.3%	4608	1185	1398	2796	50	25	WTF-V1D.1.1-V402B	
		9000	650	28.9	21.1	30	101	380	495.5	24.8	26.5	63.6	94.7%	5009	1241	1398	2796	50	25	WTF-V1D.1.1-V402B	
		10000	700	31.0	22.6	30	109	380	533.6	26.7	26.5	63.6	95.1%	5410	1297	1398	2796	50	25	WTF-V1D.1.1-V402B	
		11000	750	33.1	24.1	30	117	380	571.7	28.6	26.5	63.6	95.5%	5811	1353	1398	2796	50	25	WTF-V1D.1.1-V402B	

HW Ordering Part #	Supplier Part #	5/8" GROOVE PROFILE MACHINE: 380V, 25" Wheel, 1:1 Double Wrap Up to 4,000# Capacity, Up to 800 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5100#										Motor/Winding Specification									
		Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Rated Voltage (V)	Rated Current (A)	Rated Torque (ft-lb)	Rated Torque (Nm)	Estimated Efficiency (%)	Estimated BTU/hr		Estimated Torque (ft-lb)	Estimated Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	Max. Torque (ft-lb)	Max. Torque (Nm)	
GLV-40D1-D-V401B	WYT-V1D-2.0EFD635-V401B	2000	300	12.2	9.1	30	45.8	380	228.8	11.5	26.5	63.6	85.9	91.6%	2597	831	1398	2796	50	25	WTF-V1D.1.1-V401B
		3000	350	14.2	10.6	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2998	895	1398	2796	50	25	WTF-V1D.1.1-V401B	
		4000	400	16.3	12.1	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25	WTF-V1D.1.1-V401B	
		5000	450	18.4	13.6	30	69	380	343.1	17.2	26.5	63.6	93.1%	3405	1017	1398	2796	50	25	WTF-V1D.1.1-V401B	
		6000	500	20.5	15.1	30	77	380	381.2	19.1	26.5	63.6	93.5%	3806	1073	1398	2796	50	25	WTF-V1D.1.1-V401B	
		7000	550	22.6	16.6	30	85	380	419.3	21.0	26.5	63.6	93.9%	4207	1129	1398	2796	50	25	WTF-V1D.1.1-V401B	
		8000	600	24.7	18.1	30	93	380	457.4	22.9	26.5	63.6	94.3%	4608	1185	1398	2796	50	25	WTF-V1D.1.1-V401B	
		9000	650	26.8	19.6	30	101	380	495.5	24.8	26.5	63.6	94.7%	5009	1241	1398	2796	50	25	WTF-V1D.1.1-V401B	
		10000	700	28.9	21.1	30	109	380	533.6	26.7	26.5	63.6	95.1%	5410	1297	1398	2796	50	25	WTF-V1D.1.1-V401B	
		11000	750	31.0	22.6	30	117	380	571.7	28.6	26.5	63.6	95.5%	5811	1353	1398	2796	50	25	WTF-V1D.1.1-V401B	
GLV-40D1-D-V402B	WYT-V1D-3.5EFD635-V402B	2000	300	14.2	10.6	30	45.8	380	228.8	11.5	26.5	63.6	85.9	91.6%	2597	831	1398	2796	50	25	WTF-V1D.1.1-V402B
		3000	350	16.3	12.1	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2998	895	1398	2796	50	25	WTF-V1D.1.1-V402B	
		4000	400	18.4	13.6	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25	WTF-V1D.1.1-V402B	
		5000	450	20.5	15.1	30	69	380	343.1	17.2	26.5	63.6	93.1%	3405	1017	1398	2796	50	25	WTF-V1D.1.1-V402B	
		6000	500	22.6	16.6	30	77	380	381.2	19.1	26.5	63.6	93.5%	3806	1073	1398	2796	50	25	WTF-V1D.1.1-V402B	
		7000	550	24.7	18.1	30	85	380	419.3	21.0	26.5	63.6	93.9%	4207	1129	1398	2796	50	25	WTF-V1D.1.1-V402B	
		8000	600	26.8	19.6	30	93	380	457.4	22.9	26.5	63.6	94.3%	4608	1185	1398	2796	50	25	WTF-V1D.1.1-V402B	
		9000	650	28.9	21.1	30	101	380	495.5	24.8	26.5	63.6	94.7%	5009	1241	1398	2796	50	25	WTF-V1D.1.1-V402B	
		10000	700	31.0	22.6	30	109	380	533.6	26.7	26.5	63.6	95.1%	5410	1297	1398	2796	50	25	WTF-V1D.1.1-V402B	
		11000	750	33.1	24.1	30	117	380	571.7	28.6	26.5	63.6	95.5%	5811	1353	1398	2796	50	25	WTF-V1D.1.1-V402B	

Table 1 – Maximum Detailed Specifications

4.5 Brake Specifications

- Four brakes are supplied standard from the factory. Two brakes are meant to serve as a primary machine brake and the other two brakes as a secondary emergency brake. Please contact Hollister-Whitney for details regarding using a Rope Gripper® as the emergency brake with a GLV-40D1 machine.
- Brake switch rating DC 110 V Rated current 1.98 A.
- The opening voltage of the brake is not more than 110 V, the releasing voltage is not more than 70 V, and the control range is 15 V-30 V.
- The machine brakes are mounted in 4 locations as shown in Figure 4.

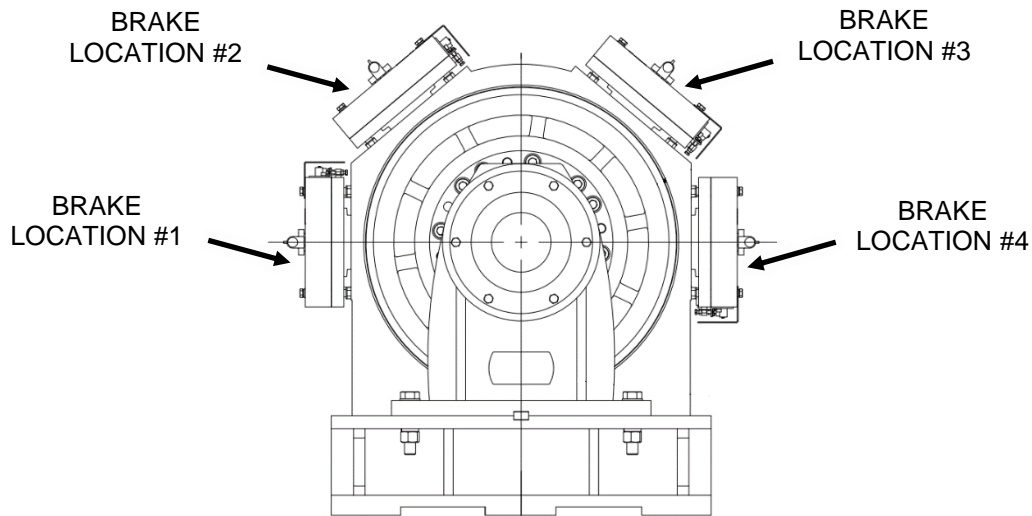


Figure 4

Section

5

5 Installation

5.1 Machine Mounting

Before hoisting the machine into place, verify all the hoisting equipment is rated for the 5300 pounds (2410 kg) weight of the machine. See Section 3.4.

Provide a level, structurally supported (rated for the load on the machine) machine space with proper clearance around the machine for maintenance and adjustments.

This machine is primarily intended to be mounted in traditional overhead applications with down-pull forces on the traction sheave.

5.1.1 Traditional Overhead Mounting

Anchor the machine to the structural support surface using the (8) mounting hole locations in the base. The hardware required to anchor the machine to the support surface should be at least 1" diameter, grade #5 minimum, with standard washers. Hardware adhering to ASME A325 is also suitable.

Note - Due to the varying mounting surface thicknesses, no mounting hardware is shipped with the machine.

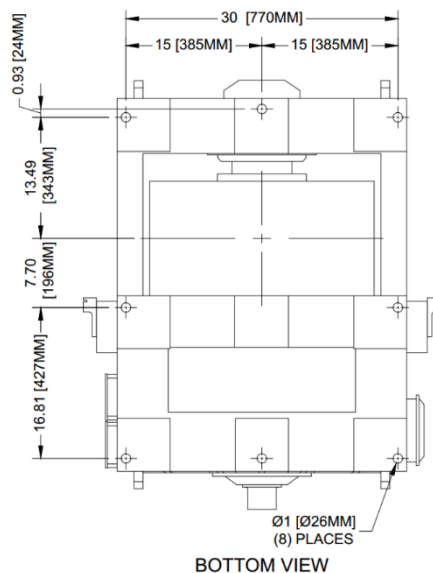


Figure 5

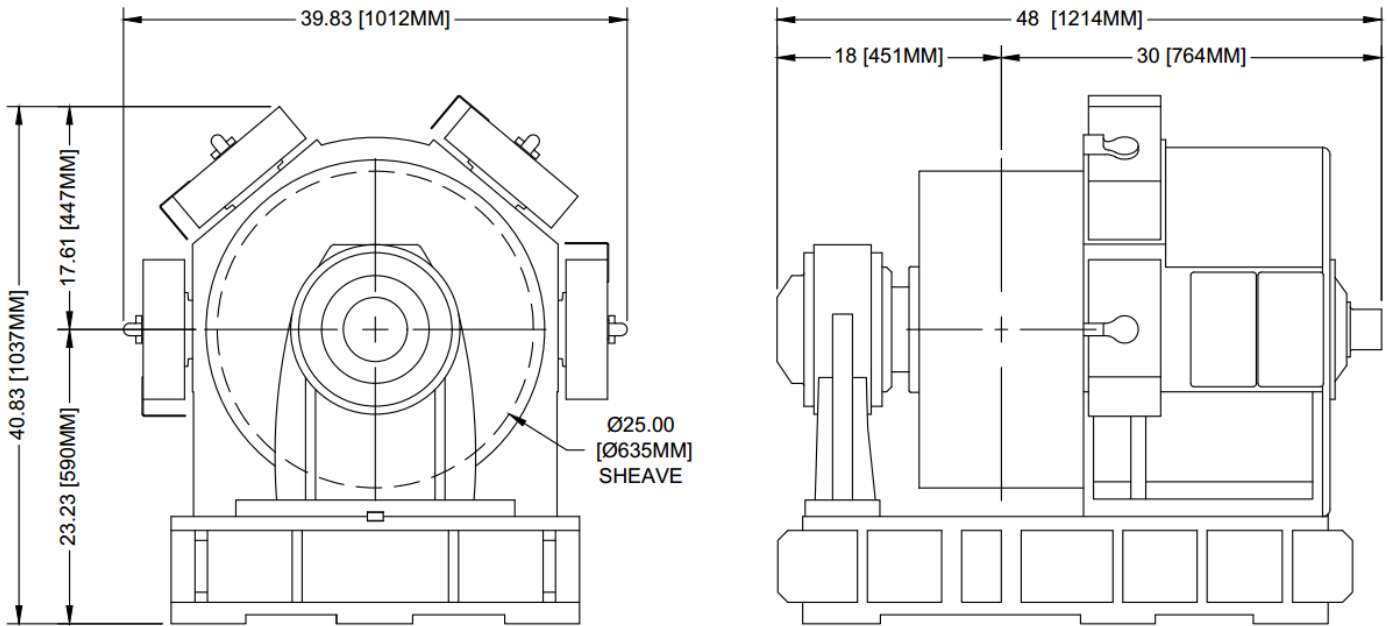


Figure 6

5.2 Electrical Connection

Use the project wiring diagrams (with the motor configuration information) to connect the motor to the controller.

⚠ WARNING

Before performing any electrical connections, make sure that power supply is turned off. Only then proceed with connecting electrical leads to power supply. Never work in machine electrical enclosure while power supply is on!

Direct connection to the three-phase power is forbidden, it may destroy the motor.

5.2.1 Machine Wiring

- The Thermal Protection Switch (TPS) is wired with leads labeled and supplied into the machine electrical enclosure. Refer to Figure 7.
- Consult your controller manufacturer for appropriate TPS connections.
- Verify the electrical supply from the elevator drive and brake power supplies match the machine data tag. Refer to Figure 1.

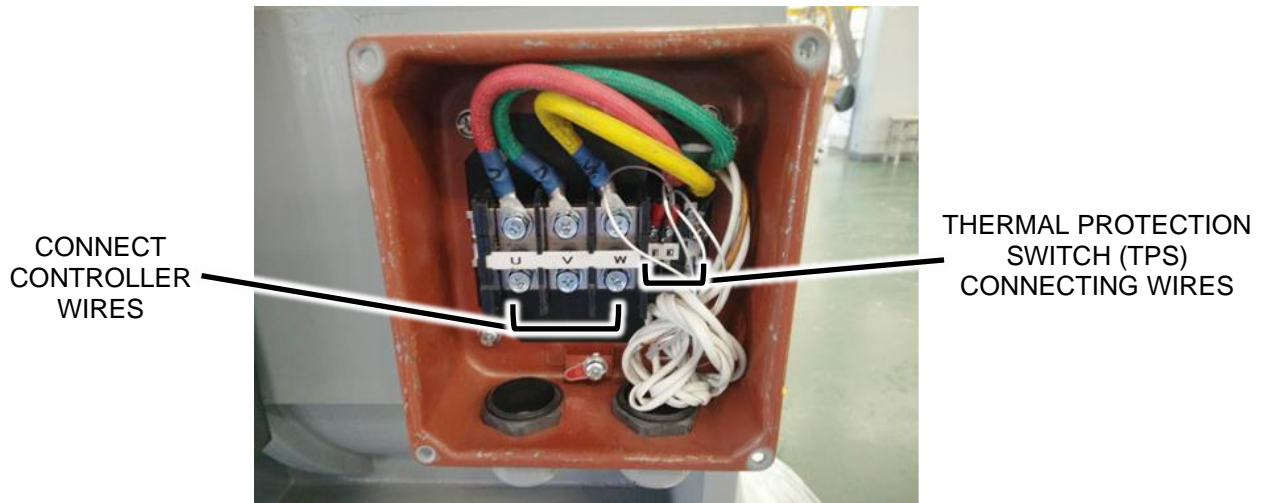


Figure 7

- Connect the U-V-W lines from the drive as shown.
- Earth Ground connects to the ground lug terminal inside the electrical enclosure.

Note - Check and tighten all leads (motor side and line side) on installation.

⚠ WARNING

The machine and emergency brake coils must be independent!

It is the responsibility of the user to connect the motor in accordance with the current laws and regulations in the country of use. This is particularly important regarding wire sizes used to connect the power, earth ground, and the type and size of fuses.

5.2.2 Brake Wiring

- Connect the machine brake and emergency brake as shown.
- The brake switches are wired normally closed from HVEC.
- To change the switches to function as normally closed, remove the blue wire from the terminal block in the electrical enclosure, and replace it with the spare gray wire coming from the brake switch.

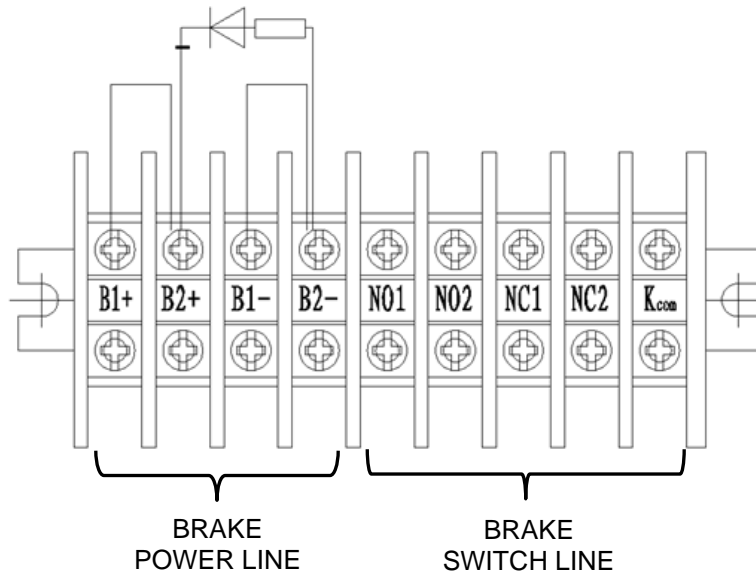


Figure 8

⚠ WARNING

- Brake coils are designed to be de-energized during each elevator stop.
- Verify brake voltage with a meter at the machine.
- 110 VDC excitation voltage for 3 seconds.
- 70 VDC “hold” voltage.

5.3 Brake Adjustment

⚠ WARNING

Before performing any maintenance on the machine brakes, take all necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!

⚠ WARNING

Brakes must be adjusted after the car and counterweight are suspended by the machine!

As brake pads are worn or new pads are installed readjustment is required.

Read all of section 5.3 prior to adjusting brake!

5.3.1 Required Tools

- TORQUE WRENCH (45 FT-LBS)
- 16MM SOCKET
- 21MM OPEN END WRENCH
- 0.012" (0.30MM) FEELER GUAGE (USED AS GO)
- 0.016" (0.40MM) FEELER GUAGE (USED AS NO-GO)
- 0.022" (0.55MM) FEELER GUAGE (MAX AIR GAP CHECK)

5.3.2 Air gap (See Figure 9 through Figure 12)

The air gap of the brake is the space between the brake body and the moveable shoe plate (shown in Figure 9). This gap must be checked to ensure proper operation of the brake. The correct air gap is between 0.012" (0.30 mm) to 0.022" (0.55 mm). It is preferable to keep the gap close to minimum < 0.016" (0.36 mm).



Figure 9

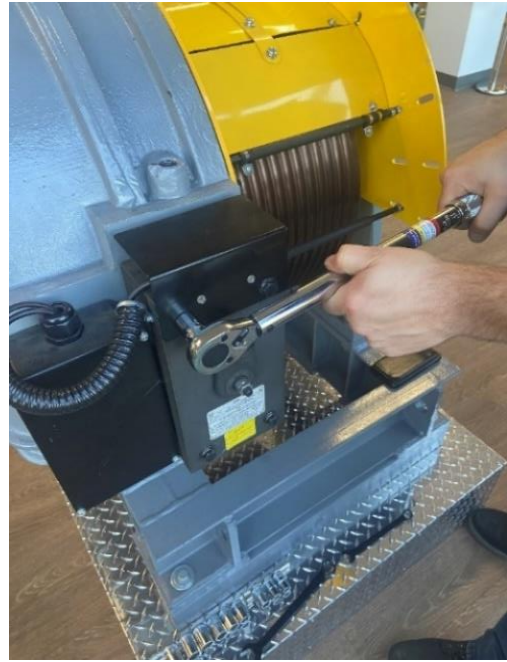


Figure 10

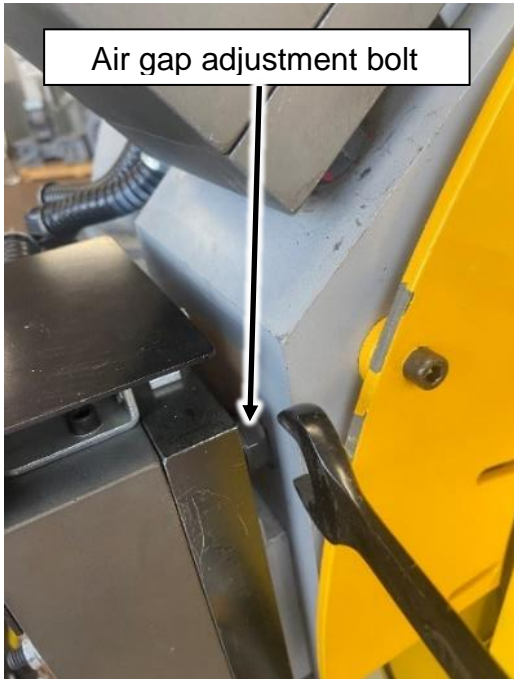


Figure 11

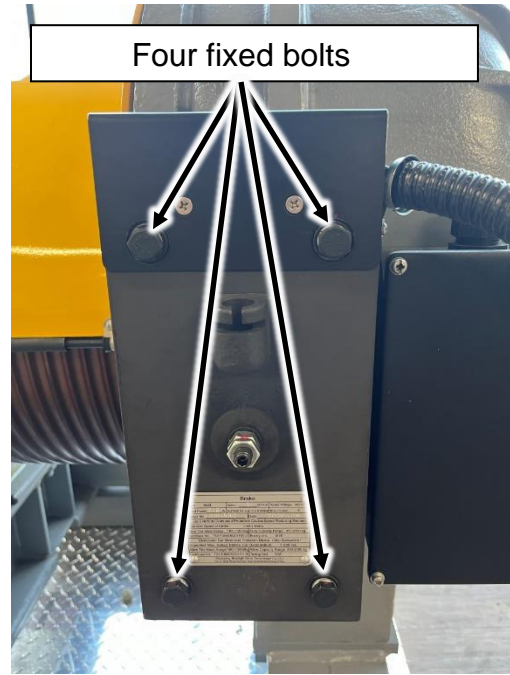


Figure 12

5.3.2.1 Air gap adjustment

An initial air gap check is to take place after the block brake has been properly installed and fixed bolts torqued to 45 ft-lb. (car and counterweight suspended by machine).

1. Using a 16 mm wrench, loosen the four fixed bolts. See Figure 10.
2. Using a torque wrench and 16 mm socket, torque the fixed bolts in an “X” pattern to 45 ft-lb (60 N-m) See Figure 10.
3. Confirm the air gap using a 0.012” (0.30 mm) and 0.016” (0.36 mm) go no-go feeler gauge to check the air gap at all four corners. The 0.012 (0.030 mm) go should feeler gauge should fit and the 0.016” (0.36 mm) should not fit. If this is the case, no adjustment is necessary. See Figure 9.

5.3.2.2 When the air gap of brake is more than 0.016” (0.36 mm), please do as follows:

1. Loosen one of the 4 fixed bolts with a 16 mm wrench. See Figure 10.
2. Use a 21 mm wrench, rotate the adjustment bolt corresponding to the loosened fixed bolt in small increments, less than ½ a flat of the hex head, counterclockwise. See Figure 11.
3. Retorque the 16mm fixed bolts to 45 ft-lbs. (60 N-m) See Figure 10.
4. Confirm air gap is 0.012 (0.30mm) to 0.016” (0.36 mm) using a feeler gauge. See Figure 9. Repeat for 3 remaining bolts.

5.3.2.3 When the air gap of brake is less than 0.012” (0.30 mm) please do as follows:

1. Loosen one fixed bolt with a 16 mm wrench see Figure 10.
2. Turn the 21 mm adjustment bolt corresponding to the loosened fixed bolt clockwise in small increments, less than ½ turn of the hex head flat. See Figure 11.
3. Retorque 16 mm fixed bolts to 45 ft-lb (60 N-m). See Figure 10.
4. Confirm air gap is within 0.012” (0.30 mm) to 0.016” (0.36 mm) using a feeler gauge. See Figure 9.

5.3.3 Manual Brake Release “Arm Free play”

- Check “free travel” only after 5.3.1 Brake Air Gap has been completed.
- Manual release arm “free travel is factory set to 1/2” both directions. See Figure 13.
- Move Brake Arm without handle as shown below, while measuring the travel.
- If Adjustment is needed contact HOLLISTER WHITNEY ELEVATOR.

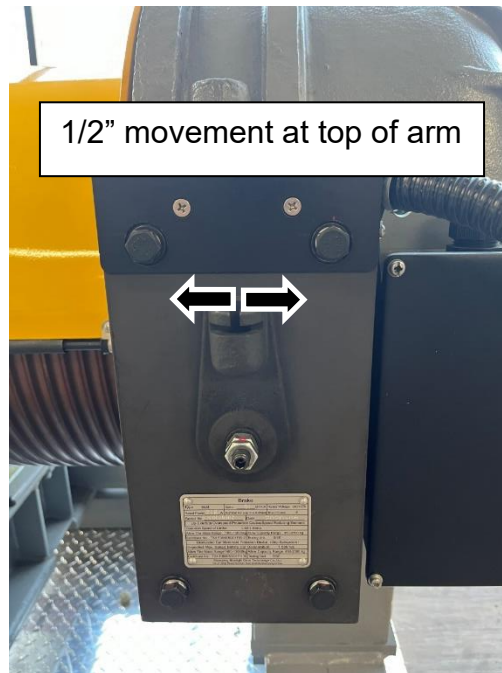


Figure 13

5.3.4 Verify Brake Function

When testing the brakes electrically energize them. Once brakes are adjusted run the car to verify the brakes are relatively quiet on stop and start. Verify no noticeable rubbing noise occurs during machine operation. Once adjustment is confirmed ensure dust guards are present to prevent dust buildup which can cause brake failure.

5.4 Brake Burnishing

WARNING

Brakes must be burnished to achieve full stopping torque!

Each brake on the machine must be burnished separately. Repeat the following procedure for each brake.

1. Clamp the brake on the rotor. Ensure brake circuit is de-energized.
2. Run the elevator in the direction of the load at 11 RPM for 1 minute.
 - a. If the overall travel of the elevator will not allow the burnishing time to be met in one pass, open (energize) the brake at the bottom of the hoist way, lift the load back to the top, and repeat the run until the burnishing time is achieved.
 - b. Stop the elevator occasionally to ensure the brake and motor do not overheat.
3. After burnishing time is achieved re-verify the air gap between the brake pads and rotor. Ensure air gap is within 0.012" (0.30 mm) to 0.022" (0.55 mm) using a feeler gauge.

5.5 Encoder Connection

The machines are supplied with Heidenhain ECN1313 2048 encoder. A 1.5-meter encoder cable is connected to the encoder and extends from the back of the machine.

Connect the supplied encoder cable to the encoder cable extending from the back of the machine.

When using a KEB drive, the encoder cable can be used "as-is."

When using any other manufacturer's drive, consult control manufacturer for cable compatibility and availability. DO NOT modify the KEB cable without first consulting the control manufacturer. Any modification of the KEB cable voids its warranty.

5.6 Startup

Verify all the motor related settings in the elevator controller match the information on the machine data tag. Refer to Figure 1.

Verify that all the brake parameters match the information on the machine data tag. Refer to Figure 1.

Follow the controller manufacturer's procedure for alignment of the magnets (motor learn).

Briefly run the machine to verify the machine functionality and brake operation.

Verify the drive sheave is plumb and aligned with the rope drop locations.

Install the hoist ropes, adjust the rope shackles, and check the ropes for equal tension. The rope tension must be uniform, or it may cause vibration and premature wear on the traction sheave and hoist ropes.

Re-verify the traction sheave is plumb once the machine is fully loaded.

5.7 Manual Brake Release

The brakes can be manually released in the event of loss of power.

NOTE: The manual releasing device should be operated by 3 professionals, and make sure the power is shut down first.

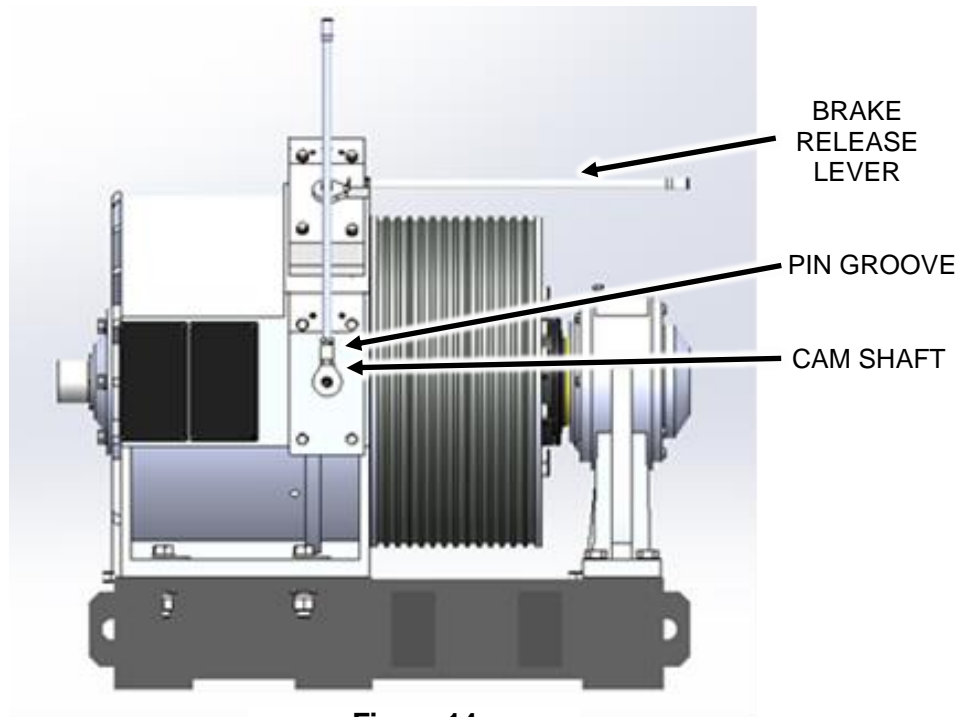


Figure 14

1. Insert the brake release levers into the cam release on top of each brake. Align the pin on the brake release lever with the mating groove on the cam release to prevent the brake release lever from slipping.
2. Apply force to the end of the brake release levers until the brake releases from the brake wheel.
3. The brake opening brake release levers must be removed from the cam release prior to normal elevator operation.

Section

6

6 Maintenance

WARNING

Before performing any maintenance checks on equipment, take all the necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!

6.1 General

To keep equipment functioning efficiently, good maintenance practices must be established, observed, and maintained. Systematic inspections of the equipment should be scheduled, and records kept of these inspections. Monitoring these records will indicate any sign of a potential issue.

Each installation has its own special conditions, so it is not possible for HVEC to outline an overall plan for periodic maintenance. HVEC would recommend, at a minimum, yearly inspections, but installation conditions may warrant a more frequent schedule. The maintenance contractor will need to make the final determination.

6.2 Cleaning

Dirt, dust, excess lubrication, and moisture are the greatest enemies of electrical equipment and of maintenance teams in general. Dirt and dust layers on a machine can prevent heat dissipation, which can lead to overheating and eventual insulation breakdown. Many types of dust in an elevator machine room are electrically conductive and can also lead to insulation failure. Dust and dirt can draw moisture to unpainted surfaces such as brake rods causing oxidation that can cause brake faults. Excess lubrication can draw dust and dirt as well.

Dust and dirt can be removed from surfaces with a dry, lint-free cloth, or with suction. With suction, however, care must be taken to not build up or discharge static electricity while cleaning. Dry, compressed air (at less than 50 psi) may also be used to remove dirt and dust however, this must be closely monitored as the compressed air will re-suspend the dust and dirt in the machine room atmosphere.

6.3 Bearings

Bearings have been sized for the maximum speeds, loads and capacities found in this manual at 50% duty. Bearings must be greased at least yearly, but greasing frequency will depend on duty and hoistway conditions.

1. To grease bearings, first remove the pressure relief plugs from the outboard stand and the back of the machine. See Figure 15.



Figure 15

2. The grease point is opposite the relief plug. Figure 16.

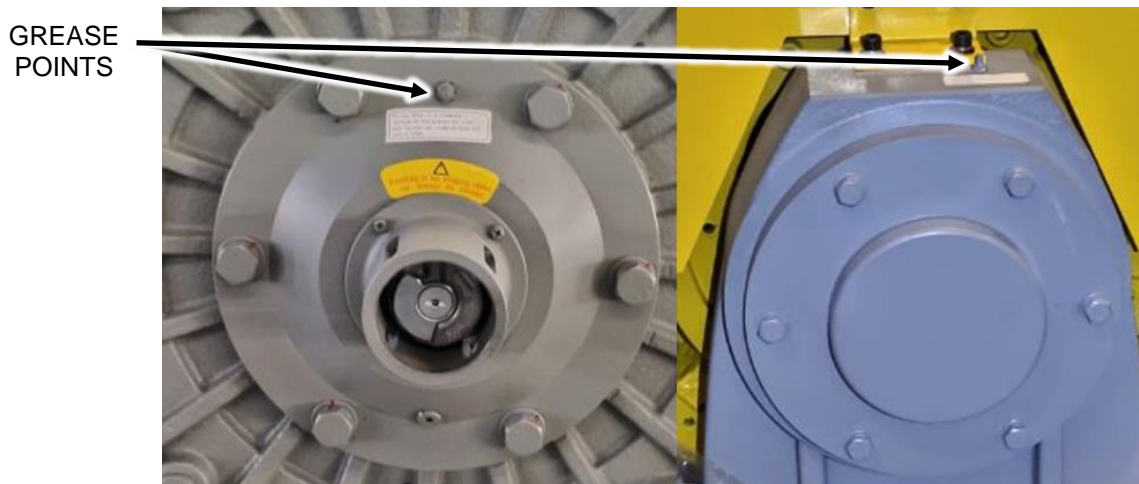


Figure 16

3. Apply 2-3 oz. of grease (use Shell “Gadus S3 V220C 2” or equal) at least yearly or according to the maintenance schedule for the installation conditions.

Bearings calculated life rating (based on speed, loads and 50% duty) is approximately 20 years. Please note that installation conditions vary, so shorter or longer bearing life may be experienced.

6.4 Brake Wear

WARNING

If the brake pad wears too much, the brake will be disabled.

6.4.1 Suggested check cycle

- Every 3 months after install in the first 6 months.
- Every 1 year afterwards.

6.4.2 Benchmark Criteria

- Check the brake for flexibility, the brake pad and traction sheave for wear, and the bearings. Replace worn and damaged parts when necessary.
- As the brake pad wears it adds to the air gap and could contribute to braking noise. You may adjust the air gap as detailed in Section 0.
- If brake pad wear is excessive replace the brake pad or replace the entire brake assembly. See Figure 17.

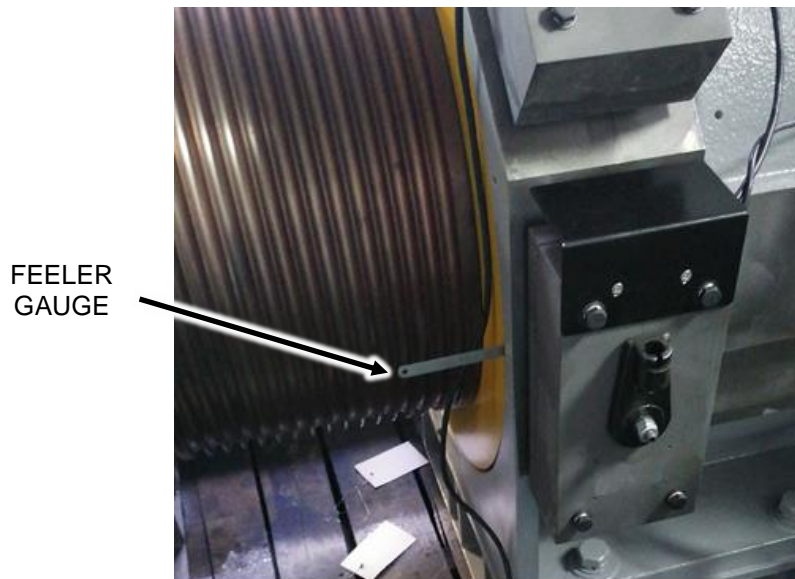


Figure 17

6.5 Other Items

Traction wheel, brake shoe and brake wheel are usually the only components that will wear. Among them, the brake wheel is most unlikely to wear. Brake pads are more likely to wear but can be monitored with feeler gauges. Refer to the brake section of this manual for brake inspection procedures.

The winding working temperature of traction machine shall not exceed 130 °C. It can be controlled by the thermal switch in the main machine. When the temperature reaches 130 °C, the traction machine shall be stopped.

When the traction machine rotates under the passive condition, it will be in the state of power generation. At this time, high voltage will be generated at the host terminal. Attention shall be paid to avoid electric shock and equipment damage.

Grease and other impurities shall be avoided between the brake pad and the brake wheel to avoid the decrease of braking force of the brake system. If the residual thickness of the brake pad is less than 5 mm due to wear, the brake pad shall be replaced.

Traction wheels are the most likely item on the machines to wear. Periodic measurements of rope depth and the evenness of wear for all ropes (groove depth should wear evenly) should be monitored. Cable should not be more than 0.125 inch (1/8") below the outer rim of the traction wheel. If cable(s), are below 0.125 inch, or if wear is uneven, replace the traction wheel and cables.

Check machine guarding and rope retainers for clearance and attachment hardware for tightness. Adjust as necessary.

Section

7

7 Replacement

WARNING

Have only qualified personnel perform the replacement work. The person who performs the replacement work must make sure that the machine power is off and that the elevator will not move unexpectedly.

7.1 Encoder Replacement

Required Tools & Materials:

- Encoder (ECN 1313)
- Hex wrench
 - 2 mm
 - 4 mm
 - 6 mm
 - 8 mm
- Hex sockets
 - 2 mm
 - 4 mm
- Torque Wrench (Need to measure 9 in-lbs. and 44 in-lbs.)
- M10 bolt (at least 1" or 25 mm in length)

7.1.1 Encoder Removal

The encoder can be removed from the front of the machine. See Figure 18.

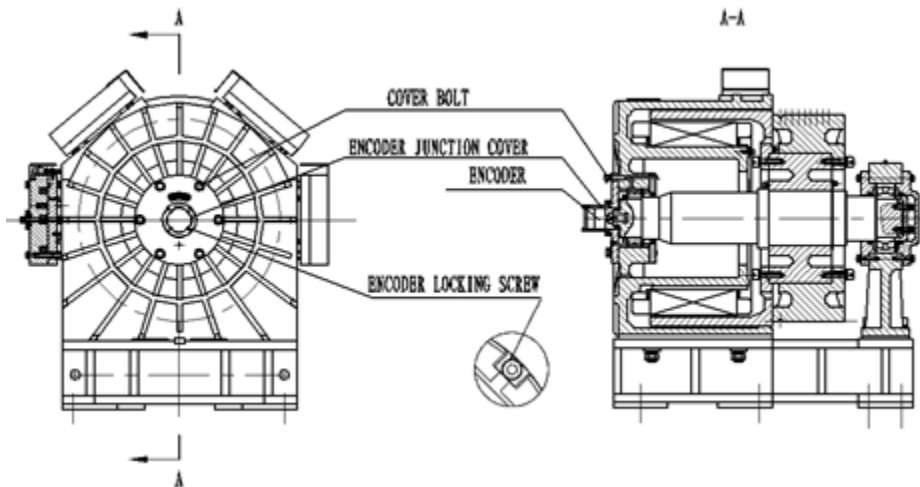


Figure 18

1. Loosen the encoder locking screw M2.5, as shown in Figure 19 with hex wrench (2 mm) through the encoder cover hole. The screw does not need to be removed.

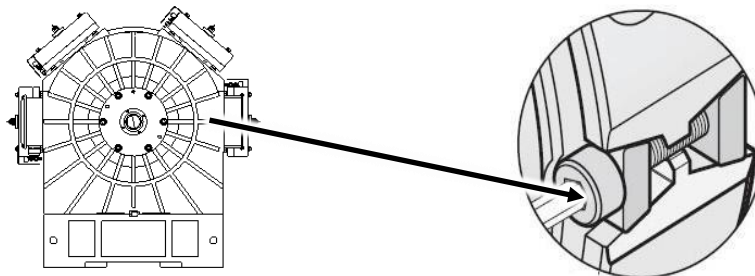


Figure 19

2. Remove the encoder bolt cover using the hex wrench (4 mm) and the encoder cable protective cover. See Figure 20.



Figure 20

- Carefully remove wiring harness connector, See Loosen the bolt M5 inside by hex wrench (4 mm) 2~3 turns only. Do not remove this bolt.

(M5 bolt must remain in the encoder so the M10 bolt can push against it). See Figure 22.

- Insert a M10 bolt into the encoder housing. See Figure 23.

- Leave the encoder cable on the machine. It does not need to be removed.

Note: Do not apply excessive pressure on the cable. It may destroy the encoder cable.



Figure 21

- Loosen the bolt M5 inside by hex wrench (4 mm) 2~3 turns only. Do not remove this bolt.

(M5 bolt must remain in the encoder so the M10 bolt can push against it). See Figure 22.



Figure 22

7. Insert a M10 bolt into the encoder housing. See Figure 23.

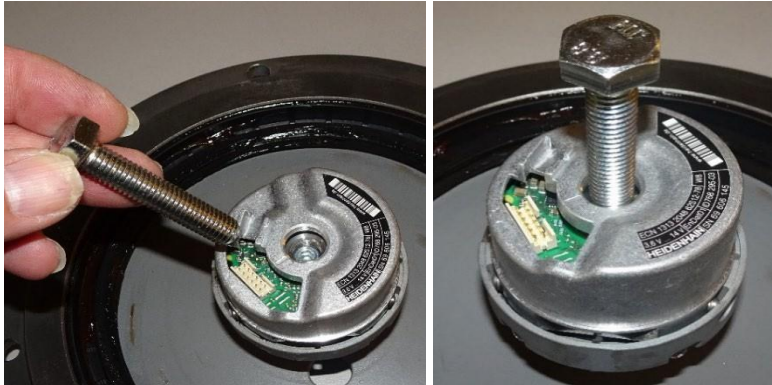


Figure 23

8. Turn the M10 bolt against the M5x50 bolt to push the encoder from the shaft. The encoder will “pop” free and will be loose to the touch yet still retained by the M5 bolt. See Figure 24.



Figure 24

9. Remove both bolts and the encoder, See Figure 25.



Figure 25

7.1.2 Encoder Installation

What's in the box. See Figure 26.



Figure 26

1. Loosen and remove the bolt M2.5 and nut assembly in the new encoder. See Figure 27.



Figure 27

2. There is a taper in the front of the encoder shaft, put the encoder shaft into the hole of the shaft. Figure 28.

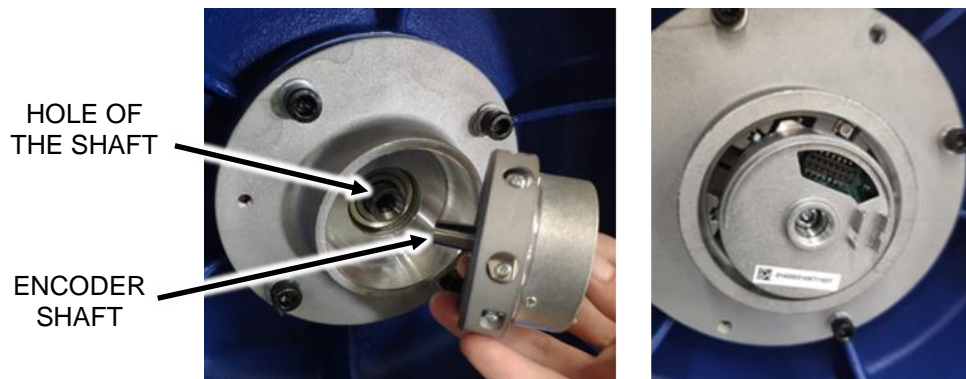


Figure 28

3. Install the encoder. Use the bolt M5 to secure the encoder to the encoder cover by hex wrench (4mm). Use 4mm socket Allen and torque wrench to tighten the bolt to 44 in-lbs. See Figure 29.



Figure 29

4. Rotate the encoder, it should be very flexible at this time, tighten the encoder locking screw according to 11 in-lbs. by a hex wrench so the encoder outer cannot rotate by hand. See Figure 30.



Figure 30

5. Install the encoder cable on the encoder. Take care to orient the plug and socket correctly. See Figure 31.

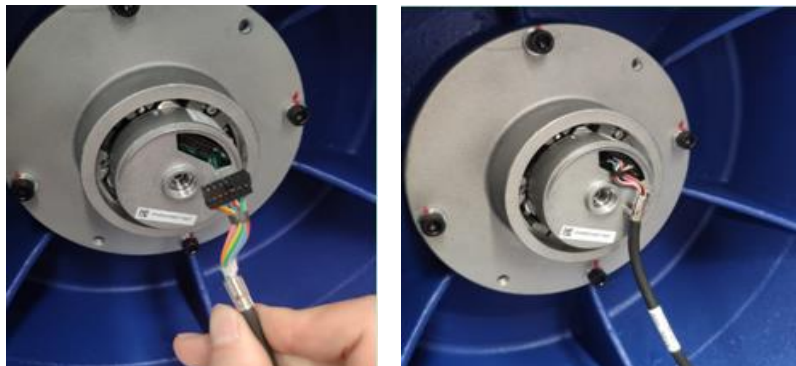


Figure 31

6. Place the cable cover on the encoder and secure with the encoder cover bolt (and cover) to the encoder. See Figure 32.



Figure 32

7. Reconnect the power supply of machine and test it.
8. Align the encoder per controller instructions.

7.2 Brake Replacement

Required Tools & Materials:

- Adjustable wrench
- Hex wrench (4 mm, 5 mm)
- Small flat head screwdriver

⚠WARNING:

Before performing any maintenance on the machine brake(s), secure the counterweight and take all the necessary safety precautions to immobilize the car and counterweight to prevent any unintended movement during the maintenance period that may result in injury or death!

Read the entire brake replacement procedure before beginning any of the steps outlined below. Contact HVEC with any questions prior to beginning the brake repair or replacement.

Before opening any electrical enclosures on the machine, remove all electricity from the machine and brakes to prevent electrical shock that may result in injury or death during the maintenance period!

7.2.1 Brake Removal

1. Remove covers as necessary to access terminal blocks and brake pin set screw (4mm hex key).
2. Disconnect machine power, see Figure 33.

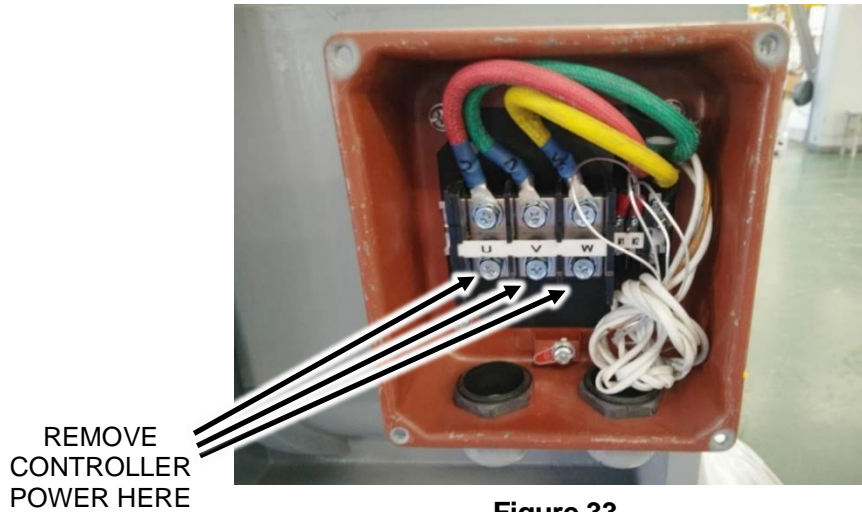


Figure 33

3. On the machine side disconnect the Brake and Brake Switch wires for the brake that is to be worked on, see Figure 34.

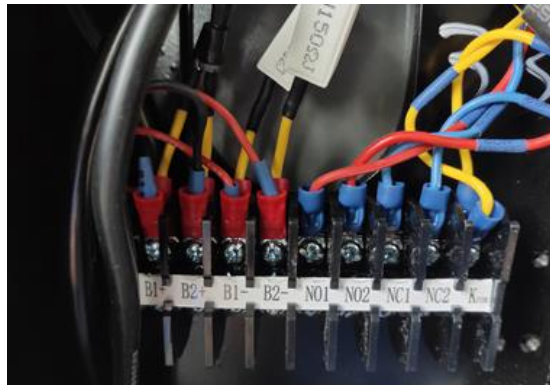


Figure 34

4. Use a wrench to loosen the mounting bolt of the installation bolt 1, so that the end face of the guide screw sleeve of the guide screw 2 is separated from the mounting surface of the base.
5. Remove the brake and related connecting accessories.
6. New or repaired brakes are replaced in the reverse order of the above instructions.

7. Adjust the guide screw sleeve of guide screw 2 and the mounting bolt of insulation bolt 1, so that the air gap between the armature of armature 5 and the armature of armature iron 4 is between 0.012" (0.30 mm) to 0.022" (0.55 mm), the gap between the brake belt and the brake wheel is 0.004" (0.10 mm) to 0.006" (0.15 mm), and the distance between the guide screw sleeve of guide screw 2 and the iron surface of armature iron 4 is about 0.197" (5 mm). no less than 0.118" (3 mm) under any conditions, as shown in Figure 35.


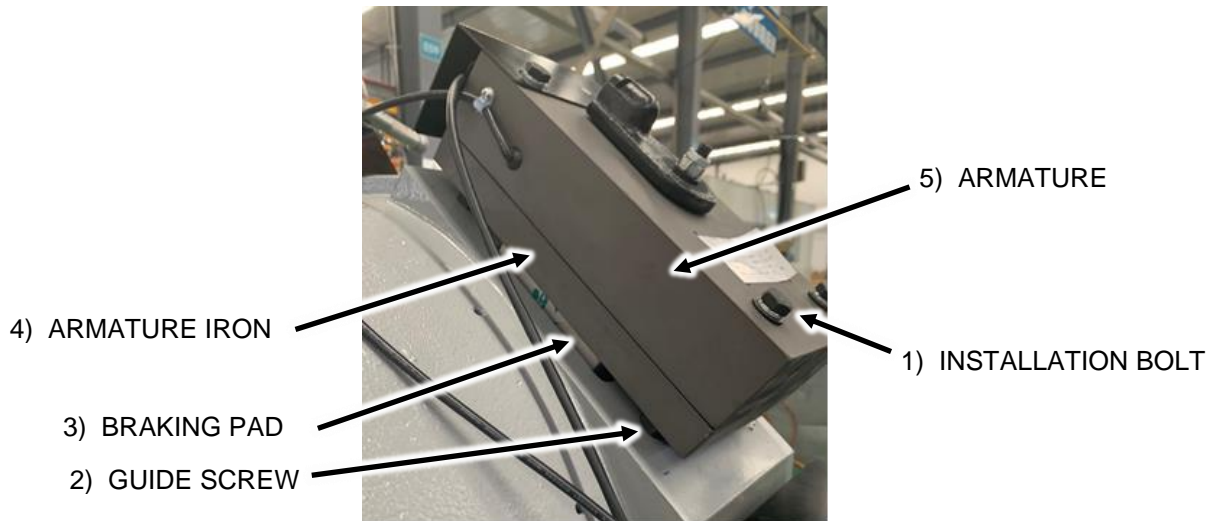



Figure 35

7.2.2 Brake Adjustment

After installation of the brake, please refer to Section 0 to confirm brake is centered and air gap has been restored to factory specifications.

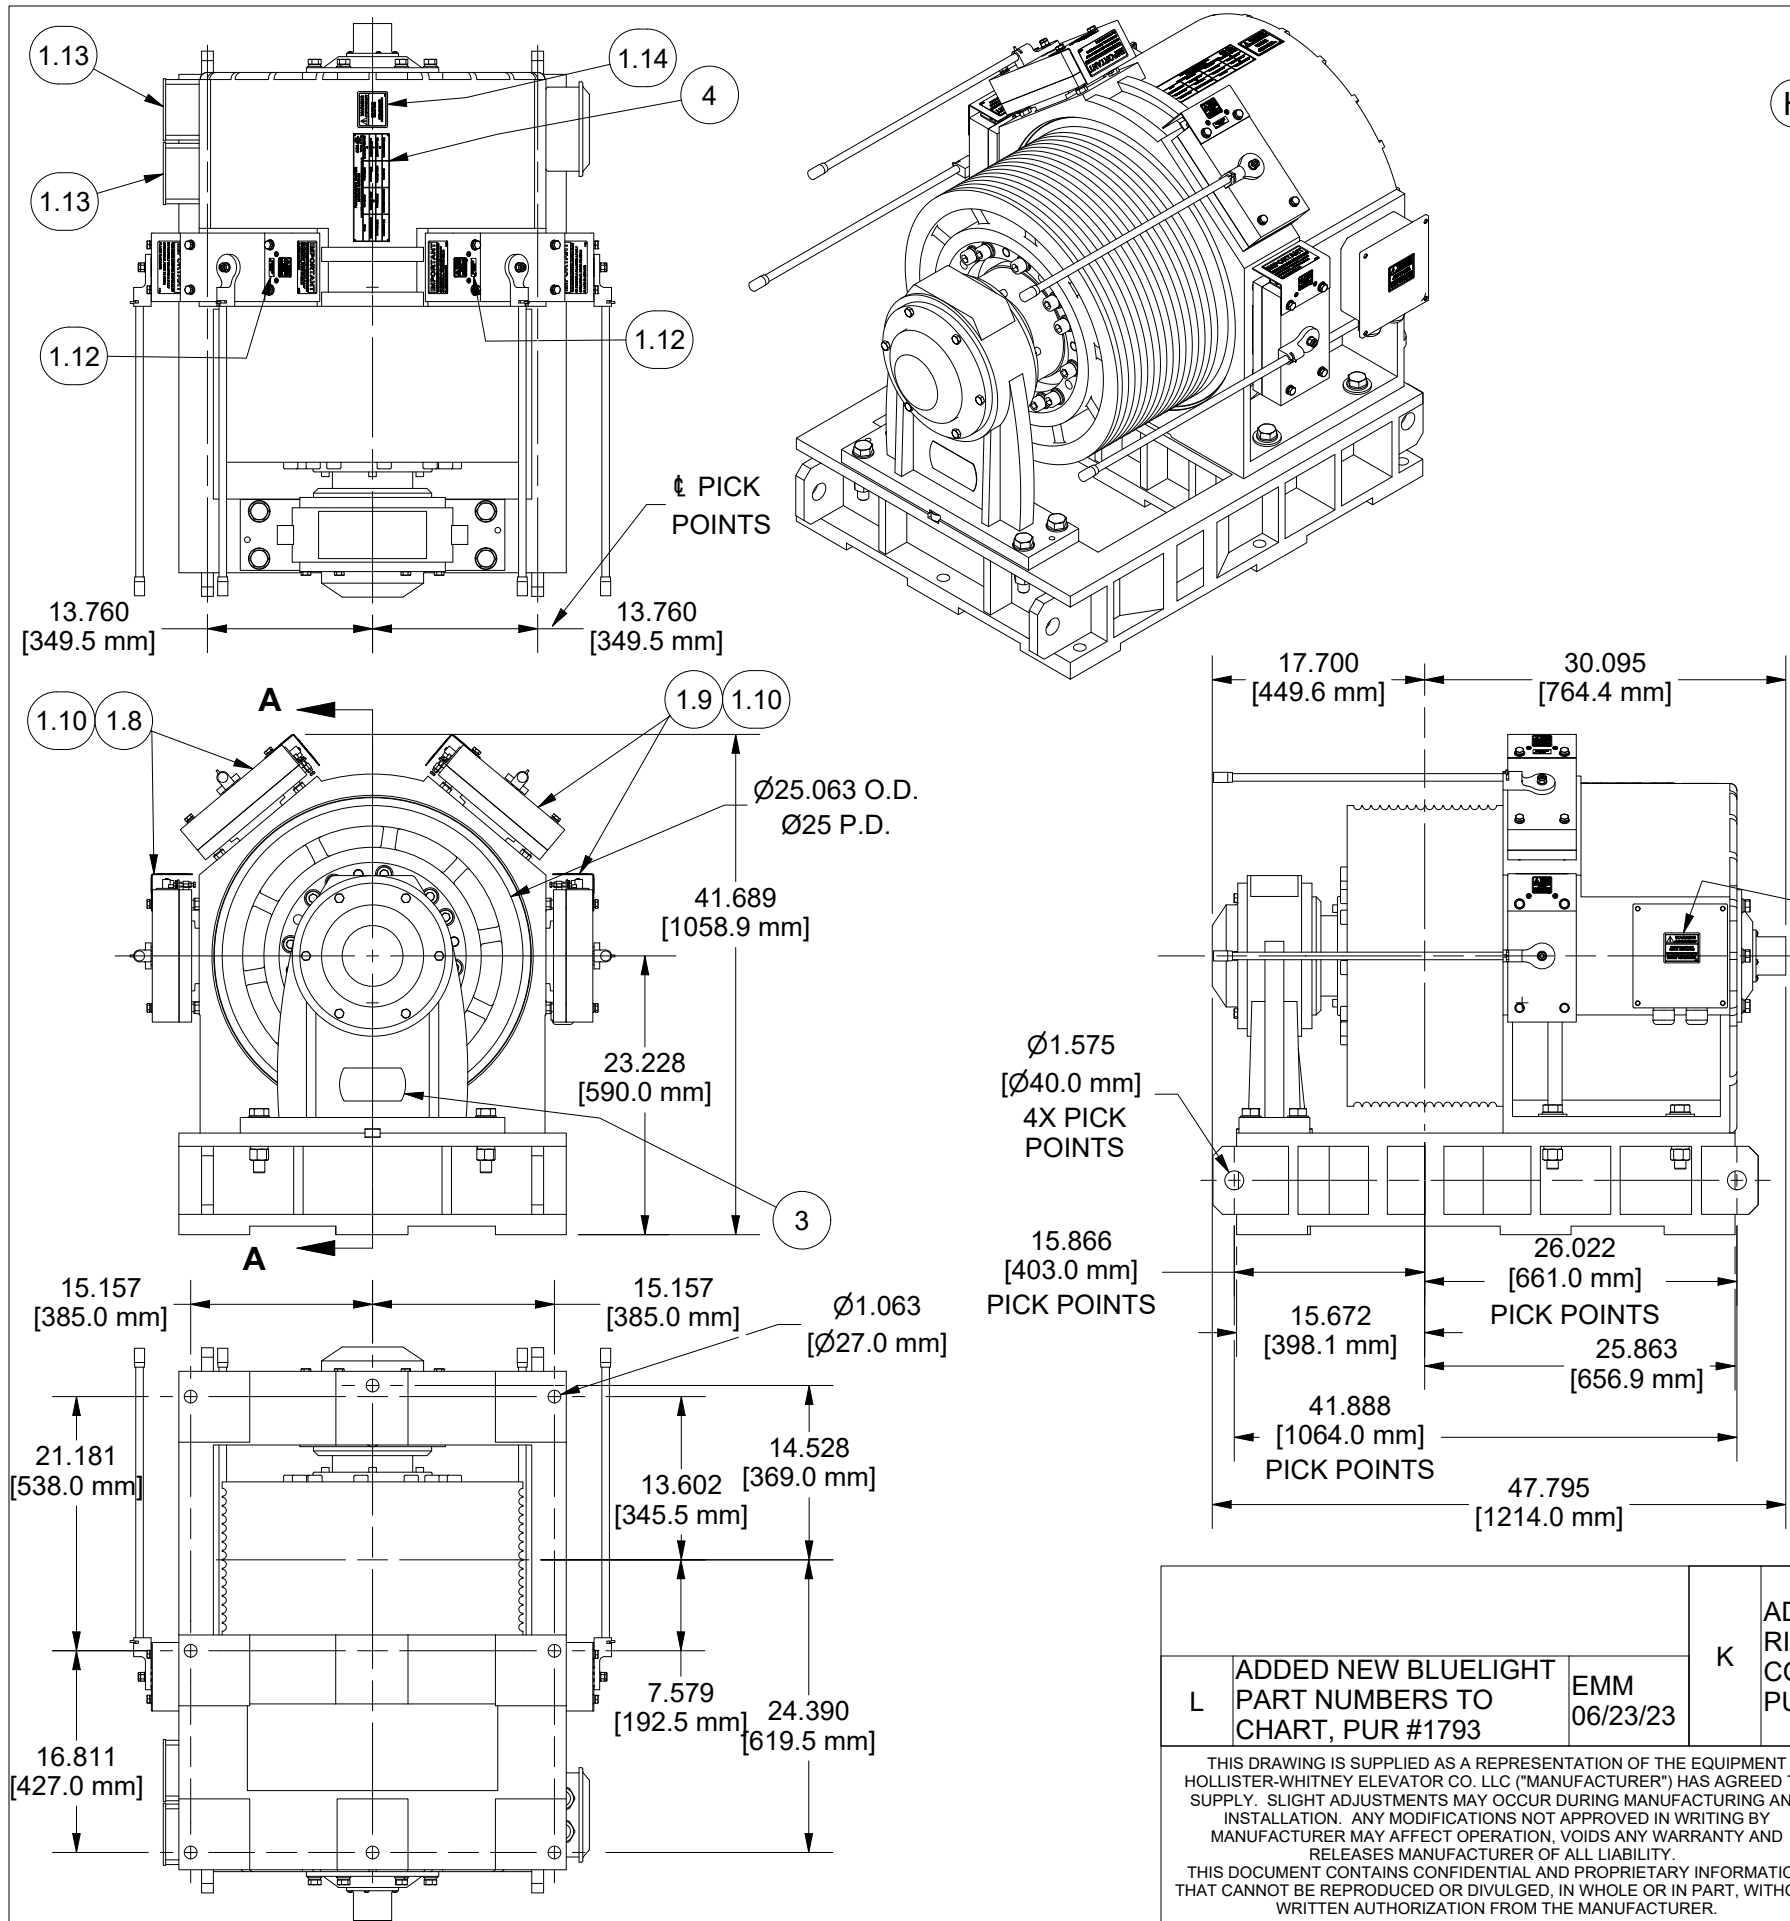

REPLACEMENT PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	GLV-40D1-R	GLV-40D1 GEARLESS MACHINE AS RECEIVED
1.1	1	GLV-40D1-009	TRACTION WHEEL - 25" DOUBLE WRAP
1.2	1	GLV-40D1-081-001	ROTARY SHAFT LIP SEAL
1.3	1	GLV-40D1-081-002	ROTARY SHAFT LIP SEAL
1.4	1	GLV-40D1-081-003	ROTARY SHAFT LIP SEAL
1.5	1	GLV-40D1-081-004	ROTARY SHAFT LIP SEAL
1.6	1	GLV-40D1-090	24028 SEALED SPHERICAL ROLLER BEARING - HOUSING
1.7	1	GLV-40D1-091	24130 SEALED SPHERICAL ROLLER BEARING - A-STAND
1.8	2	GLV-40S1-150-LH	BRAKE, GLV-40S1 & GLV-40D1
1.9	2	GLV-40S1-150-RH	BRAKE, GLV-40S1 & GLV-40D1
1.10	4	GLT-25S2-152	BRAKE DIODE
1.11	1	ENC-1313	HEIDENHAIN ENCODER ID # 768295-03 ("ECN1313 2048 62S12-78")
1.12	2	P-176	TAG, GEARLESS EMERGENCY BRAKE
1.13	3	P-221	WARNING LABEL, LIVE CIRCUITS
1.14	1	P-222	WARNING LABEL, HOT SURFACE
2	1	GL080-001-04-020	HEIDENHAIN ENCODER CABLE w/PLUGS, 1.5 METER ID# 730736-22 (NOT SHOWN)
3	1	P-230	NAMEPLATE, SMALL, HOLLISTER-WHITNEY
4	1	P-238	TAG, DATA, MACHINE, CONTRACT

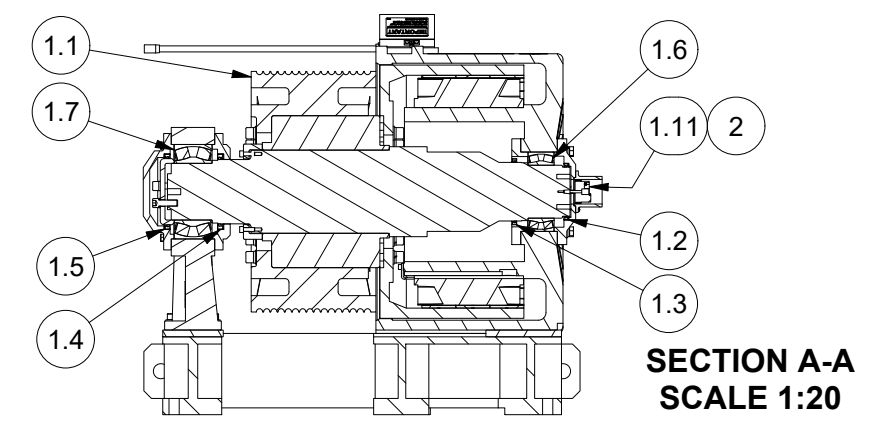

MAXIMUM DOUBLE WRAP MACHINE RATINGS 1:1

- 4000# CAPACITY, 1000 FPM
- 53000# SHEAVE/SHAFT LOAD, 26500# MAXIMUM SYSTEM LOAD
- 1/2" GROOVE DUTY CHART PAGE 2 OF 3
- 5/8" GROOVE DUTY CHART PAGE 3 OF 3
- BRAKE RELEASE LEVERS REMOVABLE. LOCATION ON DRAWING REFERENCE ONLY
- STICKER AND TAG LOCATIONS MAY VARY

WEIGHT: 5100.0 lbmass

L ADDED NEW BLUELIGHT PART NUMBERS TO CHART, PUR #1793 EMM 06/23/23		K ADDED LEFT HAND & RIGHT HAND BRAKE CONFIGURATIONS, PUR #1731 DRO 12/23/22	HOLLISTER-WHITNEY ELEVATOR CO. LLC MACHINE - DOUBLE WRAP	
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION. VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.			THIRD ANGLE PROJECTION	DRAWN BY: LTL SCALE: 1:16 MATERIAL: SEE PARTS LIST REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED GLV-40D1 SHEET 1 OF 4
SHEET SIZE: B		DATE: 3/17/2021		

1/2" GROOVE PROFILE MACHINE: 380V, 25" Wheel, 1:1 Double Wrap Up to 4,000# Capacity, Up to 800 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5100#

HW Ordering Part #	Supplier Part #	Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq(Hz)	Rated Current(A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque(ft-lbs)	MaxAccel Torque(ft-lbs)	Cwt(%)	Sheave Dia(")	MotorWinding Specification	Brake Information	Rope/Groove Information
GLV-40D1-D-V401C	WYT-V1D-2.0EFD635-V401B	2000	300	12.2	9.1	30	45.8	380	228.8	11.5	26.5	63.6	91.6%	2597	831	1398	2796	50	25	WYT-V1D.1.1-V401B		Grooves to be machined at Bluelight
			350	14.2	10.6	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2798	895	1398	2796	50	25			
			400	16.3	12.1	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25			
		2500	300	15.4	11.5	30	46	380	231.8	11.5	33.4	80.2	90.8%	3610	1155	1764	3528	50	25			
			350	18.0	13.4	30	53	380	270.4	13.4	33.4	80.2	91.6%	3825	1224	1764	3528	50	25			
			400	20.5	15.3	30	61	380	309.0	15.3	33.4	80.2	92.3%	4043	1294	1764	3528	50	25			
		3000	300	17.8	13.4	30	57	380	233.0	11.5	38.7	92.9	89.6%	4710	1507	2048	4096	50	25			
			350	20.8	15.6	30	67	380	272.5	13.4	38.7	92.9	90.8%	4869	1558	2048	4096	50	25			
			400	23.8	17.8	30	76	380	315.4	19.0	36.4	87.4	91.8%	4966	1589	2048	4096	50	25			
		3500	300	21.2	15.8	30	46	380	235.5	11.5	46.0	110.4	88.9%	5992	1918	2428	4856	50	25			
			350	24.7	18.4	30	53	380	274.8	13.4	46.0	110.4	90.1%	6250	2000	2428	4856	50	25			
			400	28.3	21.1	30	61	380	314.0	15.3	46.0	110.4	91.0%	6501	2080	2428	4856	50	25			
4000	300	23.8	17.8	30	46	380	244.5	11.5	51.7	124.1	88.0%	7286	2332	2731	5462	50	25					
	350	27.8	20.7	30	53	380	285.3	13.4	51.7	124.1	89.3%	7572	2423	2731	5462	50	25					
	400	31.8	23.7	30	61	380	326.0	15.3	51.7	124.1	90.3%	7844	2510	2731	5462	50	25					
GLV-40D1-D-V402C	WYT-V1D-3.5EFD635-V402B	2000	500	20.3	15.2	30	76	380	205.7	19.1	46.8	112.3	92.5%	3880	1242	1398	2796	50	25	WYT-V1D.1.1-V402B	Brake Part Number: D1D 110RB	See Print GRVH-TUN-0250 For STANDARD 1/2" Rope Groove Profile
			600	24.4	18.2	30	92	380	246.9	23.0	46.8	112.3	92.8%	4462	1428	1398	2796	50	25			
			700	28.5	21.2	30	107	380	288.0	26.8	46.8	112.3	93.0%	5070	1622	1398	2796	50	25			
		2500	500	25.7	19.1	30	76	380	207.9	19.1	59.0	141.6	92.5%	4918	1574	1764	3528	50	25			
			600	30.8	23.0	30	92	380	249.4	23.0	59.0	141.6	93.0%	5513	1764	1764	3528	50	25			
			700	35.9	26.8	30	107	380	291.0	26.8	59.0	141.6	93.3%	6133	1963	1764	3528	50	25			
		3000	500	29.8	22.2	30	95	380	212.2	23.9	64.5	154.8	92.4%	5763	1844	2048	4096	50	25			
			600	35.8	26.6	30	92	380	251.5	23.0	68.5	164.4	92.7%	6650	2128	2048	4096	50	25			
			700	41.7	31.1	30	107	380	293.7	26.8	68.5	164.4	93.2%	7215	2309	2048	4096	50	25			
		3500	500	35.3	26.3	30	76	380	210.7	19.1	81.2	194.9	91.8%	7368	2358	2428	4856	50	25			
			600	42.4	31.6	30	92	380	252.9	23.0	81.2	194.9	92.6%	7998	2559	2428	4856	50	25			
			700	49.4	36.9	30	107	380	295.0	26.8	81.2	194.9	93.1%	8645	2766	2428	4856	50	25			
4000	500	39.7	29.6	30	76	380	216.4	19.1	91.3	219.1	91.4%	8719	2790	2731	5462	50	25					
	600	47.7	35.5	30	92	380	259.7	23.0	91.3	219.1	92.3%	9370	2998	2731	5462	50	25					
	700	55.6	41.5	30	107	380	303.0	26.8	91.3	219.1	92.9%	10033	3211	2731	5462	50	25					
GLV-40D1-D-V403C	WYT-V1D-4.0EFD635-V403B	2000	750	30.5	22.7	30	115	380	258.8	28.6	54.6	131.0	90.2%	7569	2422	1398	2796	50	25	WYT-V1D.1.1-V403B		
			800	32.5	24.3	30	122	380	276.0	30.5	54.6	131.0	90.2%	8079	2585	1398	2796	50	25			
		2500	750	38.5	28.7	30	115	380	260.6	28.6	68.9	165.4	91.1%	8680	2777	1764	3528	50	25			
			800	41.1	30.6	30	122	380	278.0	30.5	68.9	165.4	91.2%	9201	2944	1764	3528	50	25			
		3000	750	44.7	33.3	30	115	380	262.1	28.6	80.0	192.0	91.4%	9778	3129	2048	4096	50	25			
			800	47.7	35.5	30	122	380	279.6	30.5	80.0	192.0	91.5%	10309	3299	2048	4096	50	25			
		3500	750	53.0	39.5	30	115	380	263.4	28.6	94.8	227.5	91.7%	11233	3594	2428	4856	50	25			
			800	56.5	42.1	30	122	380	281.0	30.5	94.8	227.5	91.8%	11770	3766	2428	4856	50	25			
		4000	750	59.6	44.4	30	115	380	266.3	28.6	106.6	255.8	91.7%	12635	4043	2731	5462	50	25			
			800	63.6	47.4	30	122	380	284.0	30.5	106.6	255.8	91.9%	13180	4218	2731	5462	50	25			


(H)

(H)

NOTES UNLESS OTHERWISE SPECIFIED:

- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED
- BRAKE INFORMATION:
 - PICK VOLTS: 110
 - PICK AMPS: 1.98
 - HOLD VOLTS: 70
 - HOLD AMPS: 1.26

WEIGHT:

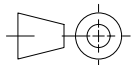L		ADDED NEW BLUELIGHT PART NUMBERS TO CHART, PUR #1793	EMM 06/23/23	K	ADDED LEFT HAND & RIGHT HAND BRAKE CONFIGURATIONS, PUR #1731	DRO 12/23/22	HOLLISTER-WHITNEY ELEVATOR CO. LLC			
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.							THIRD ANGLE PROJECTION 		TITLE MACHINE - DOUBLE WRAP	
DRAWN BY		SCALE		MATERIAL		REFERENCE TOL.				
LTL		SEE PARTS LIST		ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED		GLV-40D1				
SHEET SIZE		DATE		SHEET 2 OF 4						
B		3/17/2021								

5/8" GROOVE PROFILE MACHINE: 380V, 25" Wheel, 1:1 Double Wrap Up to 4,000# Capacity, Up to 1000 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5100#

HW Ordering Part #	Supplier Part #	Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq(Hz)	Rated Current(A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque(ft-lbs)	MaxAccel Torque(ft-lbs)	Cwt(%)	Sheave Dia(")	MotorWinding Specification	Brake Information	Rope/Groove Information
GLV-40D1-D-V401B	WYT-V1D-2.0EFD635-V401B	2000	300	12.2	9.1	30	45.8	380	228.8	11.5	26.5	63.6	91.6%	2597	831	1398	2796	50	25	WYT-V1D.1.1-V401B		
			350	14.2	10.6	30	53.5	380	266.9	13.4	26.5	63.6	92.3%	2798	895	1398	2796	50	25			
			400	16.3	12.1	30	61	380	305.0	15.3	26.5	63.6	92.7%	3004	961	1398	2796	50	25			
		2500	300	15.4	11.5	30	46	380	231.8	11.5	33.4	80.2	90.8%	3610	1155	1764	3528	50	25			
			350	18.0	13.4	30	53	380	270.4	13.4	33.4	80.2	91.6%	3825	1224	1764	3528	50	25			
			400	20.5	15.3	30	61	380	309.0	15.3	33.4	80.2	92.3%	4043	1294	1764	3528	50	25			
		3000	300	17.8	13.4	30	46	380	233.0	11.5	38.7	92.9	89.6%	4710	1507	2048	4096	50	25			
			350	20.8	15.6	30	53	380	272.5	13.4	38.7	92.9	90.8%	4869	1558	2048	4096	50	25			
			400	23.8	17.8	30	61	380	311.0	15.3	38.7	92.9	91.7%	5026	1608	2048	4096	50	25			
		3500	300	21.2	15.8	30	46	380	235.5	11.5	46.0	110.4	88.9%	5992	1918	2428	4856	50	25			
			350	24.7	18.4	30	53	380	274.8	13.4	46.0	110.4	90.1%	6250	2000	2428	4856	50	25			
			400	28.3	21.1	30	61	380	314.0	15.3	46.0	110.4	91.0%	6501	2080	2428	4856	50	25			
4000	300	23.8	17.8	30	46	380	244.5	11.5	51.7	124.1	88.0%	7286	2332	2731	5462	50	25					
	350	27.8	20.7	30	53	380	285.3	13.4	51.7	124.1	89.3%	7572	2423	2731	5462	50	25					
	400	31.8	23.7	30	61	380	326.0	15.3	51.7	124.1	90.3%	7844	2510	2731	5462	50	25					
GLV-40D1-D-V402B	WYT-V1D-3.5EFD635-V402B	2000	500	20.3	15.2	30	76	380	205.7	19.1	46.8	112.3	92.5%	3880	1242	1398	2796	50	25	WYT-V1D.1.1-V402B		
			600	24.4	18.2	30	92	380	246.9	23.0	46.8	112.3	92.8%	4462	1428	1398	2796	50	25			
			700	28.5	21.2	30	107	380	288.0	26.8	46.8	112.3	93.0%	5070	1622	1398	2796	50	25			
		2500	500	25.7	19.1	30	76	380	207.9	19.1	59.0	141.6	92.5%	4918	1574	1764	3528	50	25			
			600	30.8	23.0	30	92	380	249.4	23.0	59.0	141.6	93.0%	5513	1764	1764	3528	50	25			
			700	35.9	26.8	30	107	380	291.0	26.8	59.0	141.6	93.3%	6133	1963	1764	3528	50	25			
		3000	500	29.8	22.2	30	76	380	209.2	19.1	68.5	164.4	92.2%	5914	1893	2048	4096	50	25			
			600	35.8	26.6	30	92	380	251.5	23.0	68.5	164.4	92.7%	6650	2128	2048	4096	50	25			
			700	41.7	31.1	30	107	380	293.7	26.8	68.5	164.4	93.2%	7215	2309	2048	4096	50	25			
		3500	500	35.3	26.3	30	76	380	210.7	19.1	81.2	194.9	91.8%	7368	2358	2428	4856	50	25			
			600	42.4	31.6	30	92	380	252.9	23.0	81.2	194.9	92.6%	7998	2559	2428	4856	50	25			
			700	49.4	36.9	30	107	380	295.0	26.8	81.2	194.9	93.1%	8645	2766	2428	4856	50	25			
4000	500	39.7	29.6	30	76	380	216.4	19.1	91.3	219.1	91.4%	8719	2790	2731	5462	50	25					
	600	47.7	35.5	30	92	380	259.7	23.0	91.3	219.1	92.3%	9370	2998	2731	5462	50	25					
	700	55.6	41.5	30	107	380	303.0	26.8	91.3	219.1	92.9%	10033	3211	2731	5462	50	25					
GLV-40D1-D-V403B	WYT-V1D-4.0EFD635-V403B	2000	750	30.5	22.7	30	115	380	258.8	28.6	54.6	131.0	90.2%	7569	2422	1398	2796	50	25	WYT-V1D.1.1-V403B		
			800	32.5	24.3	30	122	380	276.0	30.5	54.6	131.0	90.2%	8079	2585	1398	2796	50	25			
		2500	750	38.5	28.7	30	115	380	260.6	28.6	68.9	165.4	91.1%	8680	2777	1764	3528	50	25			
			800	41.1	30.6	30	122	380	278.0	30.5	68.9	165.4	91.2%	9201	2944	1764	3528	50	25			
		3000	750	44.7	33.3	30	115	380	262.1	28.6	80.0	192.0	91.4%	9778	3129	2048	4096	50	25			
			800	47.7	35.5	30	122	380	279.6	30.5	80.0	192.0	91.5%	10309	3299	2048	4096	50	25			
3500	750	53.0	39.5	30	115	380	263.4	28.6	94.8	227.5	91.7%	11233	3594	2428	4856	50	25					
	800	56.5	42.1	30	122	380	281.0	30.5	94.8	227.5	91.8%	11770	3766	2428	4856	50	25					
4000	750	59.6	44.4	30	115	380	266.3	28.6	106.6	255.8	91.7%	12635	4043	2731	5462	50	25					
	800	63.6	47.4	30	122	380	284.0	30.5	106.6	255.8	91.9%	13180	4218	2731	5462	50	25					
GLV-40D1-D-V404B	WYT-V1D-5.0EFD635-V404B	2000	1000	40.7	30.4	30	153	380	289.1	38.3	62.5	150.0	90.4%	9948	3183	1398	2796	50	25	WYT-V1D.1.1-V404B		
		2500	1000	51.3	38.3	30	153	380	293.5	38.3	77.8	186.7	91.6%	10968	3510	1764	3528	50	25			
		3000	1000	59.7	44.5	30	153	380	295.4	38.3	93.0	223.2	91.8%	12448	3983	2048	4096	50	25			
		3500	1000	70.7	52.7	30	153	380	297.2	38.3	108.7	260.9	92.1%	14218	4550	2428	4856	50	25			
4000	1000	79.6	59.3	30	153	380	305.6	38.3	124.2	298.1	92.3%	15587	4988	2731	5462	50	25					

Brake Part Number: D1D 110RB
 Brake Qty: 4
 Pick Volts, Amps: 110, 1.98
 Hold Volts, Amps: 70, 1.26

Grooves to be machined at Bluelight
 Standard Grooving: 16 - 5/8" grooves on 3/4" pitch using the following groove profile:
 See Print **GRVH-TUN-0250** For STANDARD 5/8" Rope Groove Profile


(H) (H) (H)

WEIGHT:

NOTES UNLESS OTHERWISE SPECIFIED:

- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED
- BRAKE INFORMATION:
 - PICK VOLTS: 110
 - PICK AMPS: 1.98
 - HOLD VOLTS: 70
 - HOLD AMPS: 1.26

L		ADDED NEW BLUELIGHT PART NUMBERS TO CHART, PUR #1793	EMM 06/23/23	K	ADDED LEFT HAND & RIGHT HAND BRAKE CONFIGURATIONS, PUR #1731	DRO 12/23/22	HOLLISTER-WHITNEY ELEVATOR CO. LLC									
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.							THIRD ANGLE PROJECTION		DRAWN BY LTL		SCALE MATERIAL		REFERENCE TOL. ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED			
							SHEET SIZE B		DATE 3/17/2021		MACHINE - DOUBLE WRAP		SEE PARTS LIST		GLV-40D1 SHEET 3 OF 4	



5/8" GROOVE PROFILE MACHINE: 480V, 25" Wheel, 1:1 Double Wrap, Up to 4,000# capacity, Up to 700 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5657#																								
HW Ordering Part #	Supplier Part #	Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq(Hz)	Rated Current(A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque(ft-lbs)	MaxAccel Torque(ft-lbs)	Cwt(%)	Sheave Dia(")	Motor Winding Specification	Brake Information	Rope/Groove Information		
GLV-40D1-D-V501B	WYT-V1D-3.5EFD635-V501B	2000	500	20.3	15.2	30	76	480	287.1	19.1	34.0	81.6	92.5%	3880	1242	1398	2796	50	25	WYT-V1D.1.1-V501B	D1D 110RB	4	Pick Volts, Amps: 110, 1.98 Hold Volts, Amps: 70, 1.26	Grooves to be machined at Bluelight Standard Grooving: 16 - 5/8" grooves on 3/4" pitch using the following groove profile: See Print GRVH-TUN-0250 For STANDARD 5/8" Rope Groove Profile
			600	24.4	18.2	30	92	480	344.6	23.0	34.0	81.6	92.8%	4462	1428	1398	2796	50	25					
			700	28.5	21.2	30	107	480	402.0	26.8	34.0	81.6	93.0%	5070	1622	1398	2796	50	25					
		2500	500	25.7	19.1	30	76	480	289.3	19.1	43.0	103.2	92.5%	4918	1574	1764	3528	50	25					
			600	30.8	23.0	30	92	480	347.1	23.0	43.0	103.2	93.0%	5513	1764	1764	3528	50	25					
			700	35.9	26.8	30	107	480	405.0	26.8	43.0	103.2	93.3%	6133	1963	1764	3528	50	25					
		3000	500	29.8	22.2	30	76	480	209.2	19.1	50.0	120.0	92.2%	5914	1893	2048	4096	50	25					
			600	35.8	26.6	30	92	480	251.5	23.0	50.0	120.0	92.7%	6650	2128	2048	4096	50	25					
			700	41.7	31.1	30	107	480	408.0	26.8	50.0	120.0	93.2%	7215	2309	2048	4096	50	25					
		3500	500	35.3	26.3	30	76	480	293.6	19.1	59.2	142.1	91.8%	7368	2358	2428	4856	50	25					
			600	42.4	31.6	30	92	480	352.3	23.0	59.2	142.1	92.6%	7998	2559	2428	4856	50	25					
			700	49.4	36.9	30	107	480	411.0	26.8	59.2	142.1	93.1%	8645	2766	2428	4856	50	25					
4000	500	39.7	29.6	30	76	480	297.9	19.1	66.6	159.8	91.4%	8719	2790	2731	5462	50	25							
	600	47.7	35.5	30	92	480	357.4	23.0	66.6	159.8	92.3%	9370	2998	2731	5462	50	25							
	700	55.6	41.5	30	107	480	417.0	26.8	66.6	159.8	92.9%	10033	3211	2731	5462	50	25							


1/2" GROOVE PROFILE MACHINE: 480V, 25" Wheel, 1:1 Double Wrap, Up to 4,000# capacity, Up to 700 fpm, 53,000# Sheave Shaft Load, 26,500# System Load, Estimated Weight: 5657#																								
HW Ordering Part #	Supplier Part #	Capacity (lbs)	Speed (fpm)	Motor Rating (HP)	Motor Rating (kW)	Poles	Rated (rpm)	Rated Voltage	Actual Voltage	Rated Freq(Hz)	Rated Current(A)	Peak Current (A)	Estimated Efficiency	Max BTU/hr	Estimated BTU/hr	Rated Torque(ft-lbs)	MaxAccel Torque(ft-lbs)	Cwt(%)	Sheave Dia(")	Motor Winding Specification	Brake Information	Rope/Groove Information		
GLV-40D1-D-V501C	WYT-V1D-3.5EFD635-V501B	2000	500	20.3	15.2	30	76	480	287.1	19.1	34.0	81.6	92.5%	3880	1242	1398	2796	50	25	WYT-V1D.1.1-V501B	D1D 110RB	4	Pick Volts, Amps: 110, 1.98 Hold Volts, Amps: 70, 1.26	Grooves to be machined at Bluelight Standard Grooving: 18 - 1/2" grooves on 5/8" pitch using the following groove profile: See Print GRVH-TUN-0250 For STANDARD 1/2" Rope Groove Profile
			600	24.4	18.2	30	92	480	344.6	23.0	34.0	81.6	92.8%	4462	1428	1398	2796	50	25					
			700	28.5	21.2	30	107	480	402.0	26.8	34.0	81.6	93.0%	5070	1622	1398	2796	50	25					
		2500	500	25.7	19.1	30	76	480	289.3	19.1	43.0	103.2	92.5%	4918	1574	1764	3528	50	25					
			600	30.8	23.0	30	92	480	347.1	23.0	43.0	103.2	93.0%	5513	1764	1764	3528	50	25					
			700	35.9	26.8	30	107	480	405.0	26.8	43.0	103.2	93.3%	6133	1963	1764	3528	50	25					
		3000	500	29.8	22.2	30	76	480	209.2	19.1	50.0	120.0	92.4%	5763	1844	2048	4096	50	25					
			600	35.8	26.6	30	92	480	251.5	23.0	50.0	120.0	92.7%	6650	2128	2048	4096	50	25					
			700	41.7	31.1	30	107	480	408.0	26.8	50.0	120.0	93.2%	7215	2309	2048	4096	50	25					
		3500	500	35.3	26.3	30	76	480	293.6	19.1	59.2	142.1	91.8%	7368	2358	2428	4856	50	25					
			600	42.4	31.6	30	92	480	352.3	23.0	59.2	142.1	92.6%	7998	2559	2428	4856	50	25					
			700	49.4	36.9	30	107	480	411.0	26.8	59.2	142.1	93.1%	8645	2766	2428	4856	50	25					
4000	500	39.7	29.6	30	76	480	297.9	19.1	66.6	159.8	91.4%	8719	2790	2731	5462	50	25							
	600	47.7	35.5	30	92	480	357.4	23.0	66.6	159.8	92.3%	9370	2998	2731	5462	50	25							
	700	55.6	41.5	30	107	480	417.0	26.8	66.6	159.8	92.9%	10033	3211	2731	5462	50	25							

(L)

NOTES UNLESS OTHERWISE SPECIFIED:

- BRAKE SWITCH NORMALLY CLOSED WHEN BRAKE IS DE-ENERGIZED
- BRAKE INFORMATION:
 - PICK VOLTS: 110
 - PICK AMPS: 1.98
 - HOLD VOLTS: 70
 - HOLD AMPS: 1.26

WEIGHT:

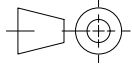L		ADDED NEW BLUELIGHT PART NUMBERS TO CHART, PUR #1793		EMM 06/23/23	K	ADDED LEFT HAND & RIGHT HAND BRAKE CONFIGURATIONS, PUR #1731		DRO 12/23/22	HOLLISTER-WHITNEY ELEVATOR CO. LLC MACHINE - DOUBLE WRAP				
<small>THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY.</small> <small>THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.</small>						THIRD ANGLE PROJECTION			DRAWN BY LTL	SCALE	MATERIAL	REFERENCE TOL.	
									SHEET SIZE B	DATE 3/17/2021	SEE PARTS LIST		ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED
											GLV-40D1 SHEET 4 OF 4		



HEIDENHAIN



Product Information

ECN 1313

ECN 1325

ERN 1387


Rotary Encoders with
Plane-Surface Coupling for
Elevator Servo Drive
Control

July 2017

ECN/ERN 1300 series

Rotary encoders with integral bearings for elevator technology

- Simple installation
- Rigid shaft coupling
- Plane-surface coupling for large mounting tolerances
- Uniform dimensions for various electrical interfaces

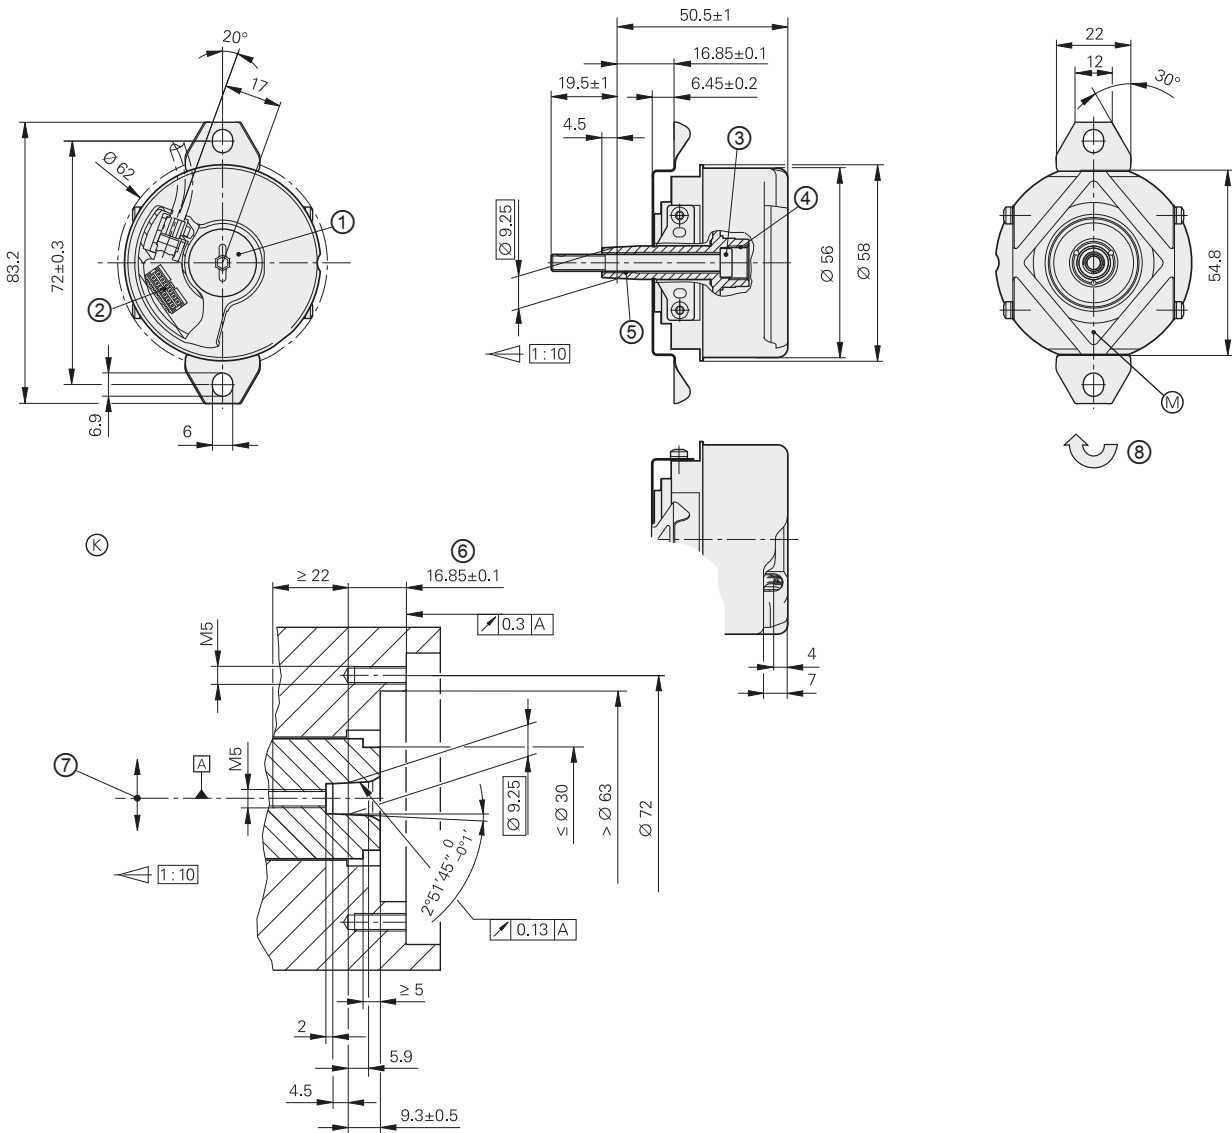

mm

 Tolerancing ISO 8015
 ISO 2768 - m H
 < 6 mm: ±0.2 mm

- ▣ = Bearing of mating shaft
- ▣ = Bearing of encoder
- ⊙ = Required mating dimensions
- ⊙ = Measuring point for operating temperature
- 1 = Screw plug, width A/F 3 and 4. Tightening torque: 5+0.5 Nm
- 2 = PCB connector
- 3 = Self-tightening screw M5 x 50 DIN 6912 width A/F 4, tightening torque 5+0.5 Nm
- 4 = M10 back-off thread
- 5 = M6 back-off thread
- 6 = Max. permissible tolerance during motor shaft rotation ±1.5 mm
- 7 = Max. permissible static radial offset of motor shaft in indicated direction ±0.13 mm
- 8 = Direction of shaft rotation for output signals as per the interface description

	Absolute		Incremental
	ECN 1325	ECN 1313	ERN 1387
Part number	683643-xx	768295-xx	749146-xx
Interface¹⁾	EnDat 2.2		~ 1 V _{PP}
Ordering designation	EnDat22	EnDat01	–
Position values/revolution	33554432 (25 bits)	8192 (13 bits)	Z1 track ³⁾
Electrically permissible speed/error ²⁾	≤ 15000 rpm (for continuous position value)	≤ 1500 rpm/±1 LSB ≤ 12000 rpm/±50 LSB	–
Calculation time t _{cal} Clock frequency	≤ 7 μs ≤ 16 MHz	≤ 9 μs ≤ 2 MHz	– –
Incremental signals ¹⁾	–	~ 1 V _{PP}	~ 1 V _{PP}
Line count/system accuracy	2048/±20''		
Reference mark	–		One
Cutoff frequency –3 dB	–	≥ 400 kHz	≥ 210 kHz
Electrical connection Via PCB connector	<i>Rotary encoder</i> : 12-pin <i>Temperature sensor⁴⁾</i> : 4-pin	12-pin	14-pin
Voltage supply	DC 3.6 V to 14 V		DC 5 V ±0.25 V
Power consumption ¹⁾ (maximum)	3.6 V: ≤ 600 mW 14 V: ≤ 700 mW		–
Current consumption	5 V: 85 mA (typical, without load)		≤ 130 mA (without load)
Stator coupling	Plane-surface coupling		
Shaft	Taper shaft Ø 9.25 mm; taper 1:10		
Mech. permiss. speed n	≤ 2000 rpm		
Starting torque	≤ 0.01 Nm (at 20 °C)		
Moment of inertia of rotor	2.6 · 10 ⁻⁶ kgm ²		
Permissible axial motion of measured shaft ⁵⁾	±1.5 mm		
Radial runout of the measured shaft	0.13 mm		
Vibration 55 Hz to 2000 Hz Shock 6 ms	≤ 300 m/s ² ⁶⁾ (EN 60068-2-6) ≤ 2000 m/s ² (EN 60068-2-27)		
Operating temperature	–40 °C to +115 °C		–40 °C to +120 °C
Protection EN 60529	IP40 when mounted		
Mass	≈ 0.25 kg		

¹⁾ See *Interfaces of HEIDENHAIN Encoders* brochure

²⁾ Velocity-dependent deviations between the absolute value and incremental signals

³⁾ One sine and one cosine signal per revolution

⁴⁾ Evaluation optimized for KTY 84-130

⁵⁾ Compensation of mounting tolerances and thermal expansion, not dynamic motion

⁶⁾ As per standard for room temperature; for operating temperature
Up to +100 °C: ≤ 300 m/s²
Up to +115 °C or +120 °C: ≤ 150 m/s²

Electrical connection

Pin layouts

ECN 1313 pin layout

17-pin coupling or flange socket M23						12-pin PCB connector								
	Power supply					Incremental signals ¹⁾				Serial data transfer				
	7	1	10	4	11	15	16	12	13	14	17	8	9	
	12	1b	6a	4b	3a	/	2a	5b	4a	3b	6b	1a	2b	5a
	U_P	Sensor U_P	0V	Sensor 0V	Internal shield	A+	A-	B+	B-	DATA	$\overline{\text{DATA}}$	CLOCK	$\overline{\text{CLOCK}}$	
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/ Black	Red/ Black	Gray	Pink	Violet	Yellow	

Other signals		
	5	6
	/	/
	/	/
	Brown ²⁾	White ²⁾

Cable shield connected to housing; U_P = Power supply voltage; T = Temperature
Sensor: The sensor line is connected in the encoder with the corresponding power line.
 Vacant pins or wires must not be used.

- ¹⁾ Only with ordering designations EnDat 01 and EnDat 02
²⁾ Only for cables inside the motor housing

ECN 1325 pin layout

8-pin coupling or flange socket, M12					9-pin flange socket, M23					
16-pin PCB connector										
	Voltage supply				Serial data transfer				Other signals	
	8	2	5	1	3	4	7	6	/	/
	3	7	4	8	5	6	1	2	/	/
	1b	6a	4b	3a	6b	1a	2b	5a	8a	8b
	U_P	Sensor U_P	0V	Sensor 0V	DATA	$\overline{\text{DATA}}$	CLOCK	$\overline{\text{CLOCK}}$	T+	T-
	Brown/ Green	Blue	White/ Green	White	Gray	Pink	Violet	Yellow	Brown	Green

Cable shield connected to housing
 U_P = Power supply; T = Temperature
Sensor: The sensor line is connected in the encoder with the corresponding power line.
 Vacant pins or wires must not be used.

ERN 1387 pin layout

17-pin coupling or flange socket M23						14-pin PCB connector					
Voltage supply					Incremental signals						
	7	1	10	4	11	15	16	12	13	3	2
	1b	7a	5b	3a	/	6b	2a	3b	5a	4b	4a
	U_P	Sensor U _P	0V	Sensor 0V	Internal shield	A+	A-	B+	B-	R+	R-
	Brown/ Green	Blue	White/ Green	White	/	Green/ Black	Yellow/ Black	Blue/Black	Red/Black	Red	Black


Other signals						
	14	17	9	8	5	6
	7b	1a	2b	6a	/	/
	C+	C-	D+	D-	T+ ¹⁾	T- ¹⁾
	Gray	Pink	Yellow	Violet	Green	Brown

Cable shield connected to housing;

U_P = Power supply; **T** = Temperature

Sensor: The sensor line is connected internally with the corresponding power line. Vacant pins or wires must not be used.


¹⁾ Only for cables inside the motor housing

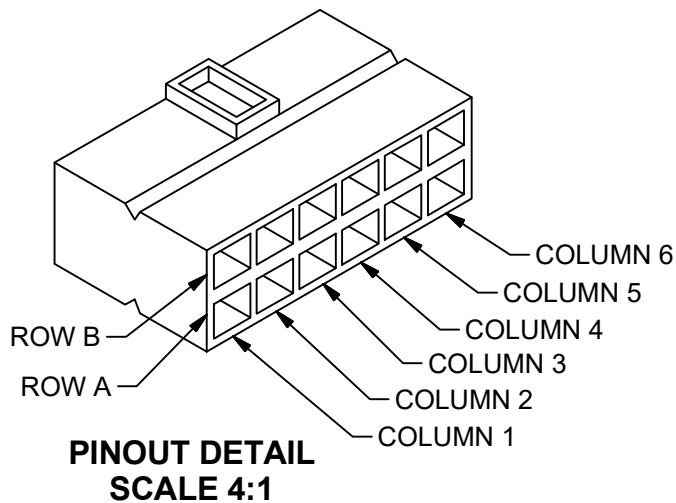

PIN LAYOUT		
PIN	WIRE COLOR	FUNCTION
1A	PINK	DATA -
2A	GREEN/BLACK	A+
3A	WHITE	SENSOR (V0)
4A	BLUE/BLACK	B+
5A	YELLOW	CLOCK -
6A	BLUE	SENSOR (Up)
1B	BROWN/GREEN	POWER (Up)
2B	PURPLE	CLOCK +
3B	RED/BLACK	B-
4B	WHITE/GREEN	ZERO V (V0)
5B	YELLOW/BLACK	A-
6B	GREY	DATA +

NOTES: HEIDENHAIN CABLE ASSEMBLY. REF. ID No. 730736-22

291614-02 PLUG
SEE PINOUT DETAIL ABOVE
REF. HEIDENHAIN DRAWING
#D332202-05-A-01
FOR PLUG AND CABLE

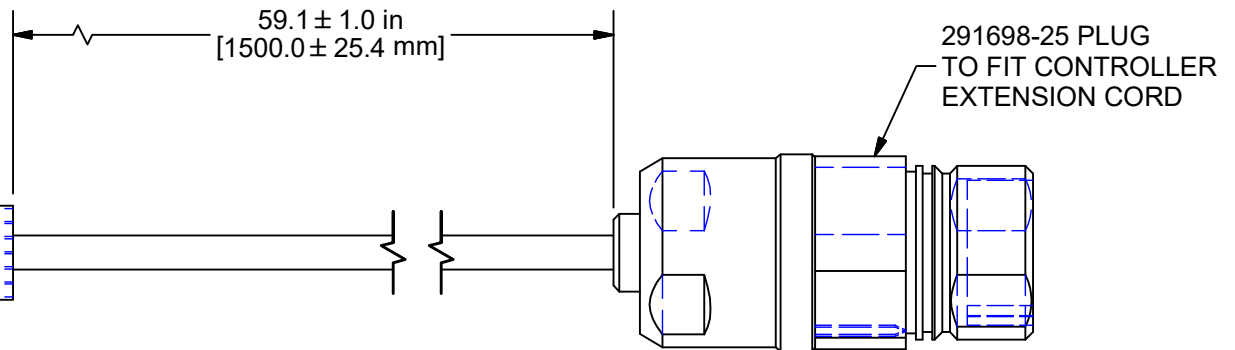

WEIGHT: 0.5 lbmass

					HOLLISTER-WHITNEY								
					ELEVATOR CO. LLC								
					TITLE								
					ENCODER CABLE WITH PLUGS - 1.5 METER LENGTH								
					DRAWN BY		SCALE		MATERIAL	REFERENCE TOL.			
					LTL		1 : 1		AS PURCHASED, SEE NOTES	ALL DIMENSIONS REFERENCE UNLESS OTHERWISE SPECIFIED			
THIS DRAWING IS SUPPLIED AS A REPRESENTATION OF THE EQUIPMENT HOLLISTER-WHITNEY ELEVATOR CO. LLC ("MANUFACTURER") HAS AGREED TO SUPPLY. SLIGHT ADJUSTMENTS MAY OCCUR DURING MANUFACTURING AND INSTALLATION. ANY MODIFICATIONS NOT APPROVED IN WRITING BY MANUFACTURER MAY AFFECT OPERATION, VOIDS ANY WARRANTY AND RELEASES MANUFACTURER OF ALL LIABILITY. THIS DOCUMENT CONTAINS CONFIDENTIAL AND PROPRIETARY INFORMATION THAT CANNOT BE REPRODUCED OR DIVULGED, IN WHOLE OR IN PART, WITHOUT WRITTEN AUTHORIZATION FROM THE MANUFACTURER.					THIRD ANGLE PROJECTION						SHEET SIZE	DATE	GL080-001-04-020

Stiftsteckverbinder : SUB-D 15 pol.
Metallgehäuse mit Schirmanbindung
Gehäusebreite max 31 mm

Kabel : 4 x (2 x 0,14) + 2 x (0,5)
Geeignet für Energieführungsketten
Dauerbetriebstemperatur 80 Grad
Ölbeständig
Farbe orange RAL 2003




Buchsensteckverbinder : Metallgehäuse mit
Schirmanbindung, Kontaktbuchsen

Hersteller 1 : Intercontec
Typ : ASTA 035 FR 11 12 0005 000

Hersteller 2 : Interconnectron
Typ : SPN A 17B NN NN 169

Hersteller 3 : Coninvers
Typ : RC-17 S1N8A R300

CABLE LENGTH UP TO 30 M

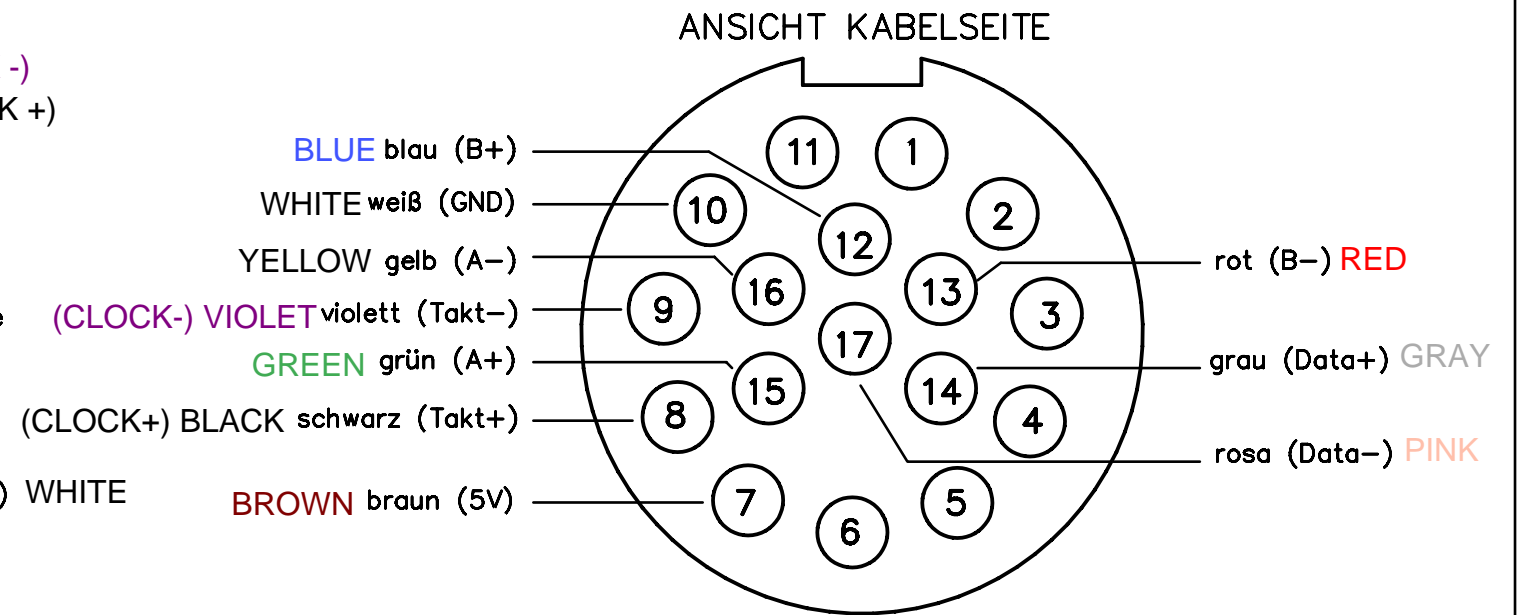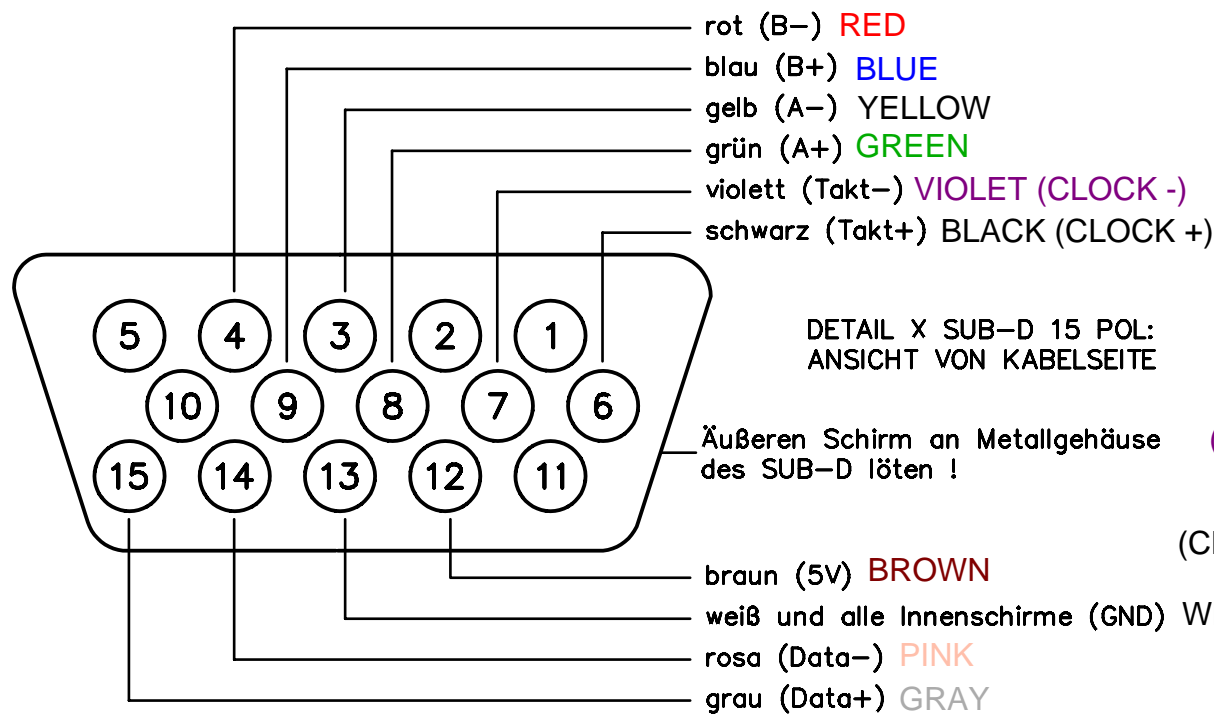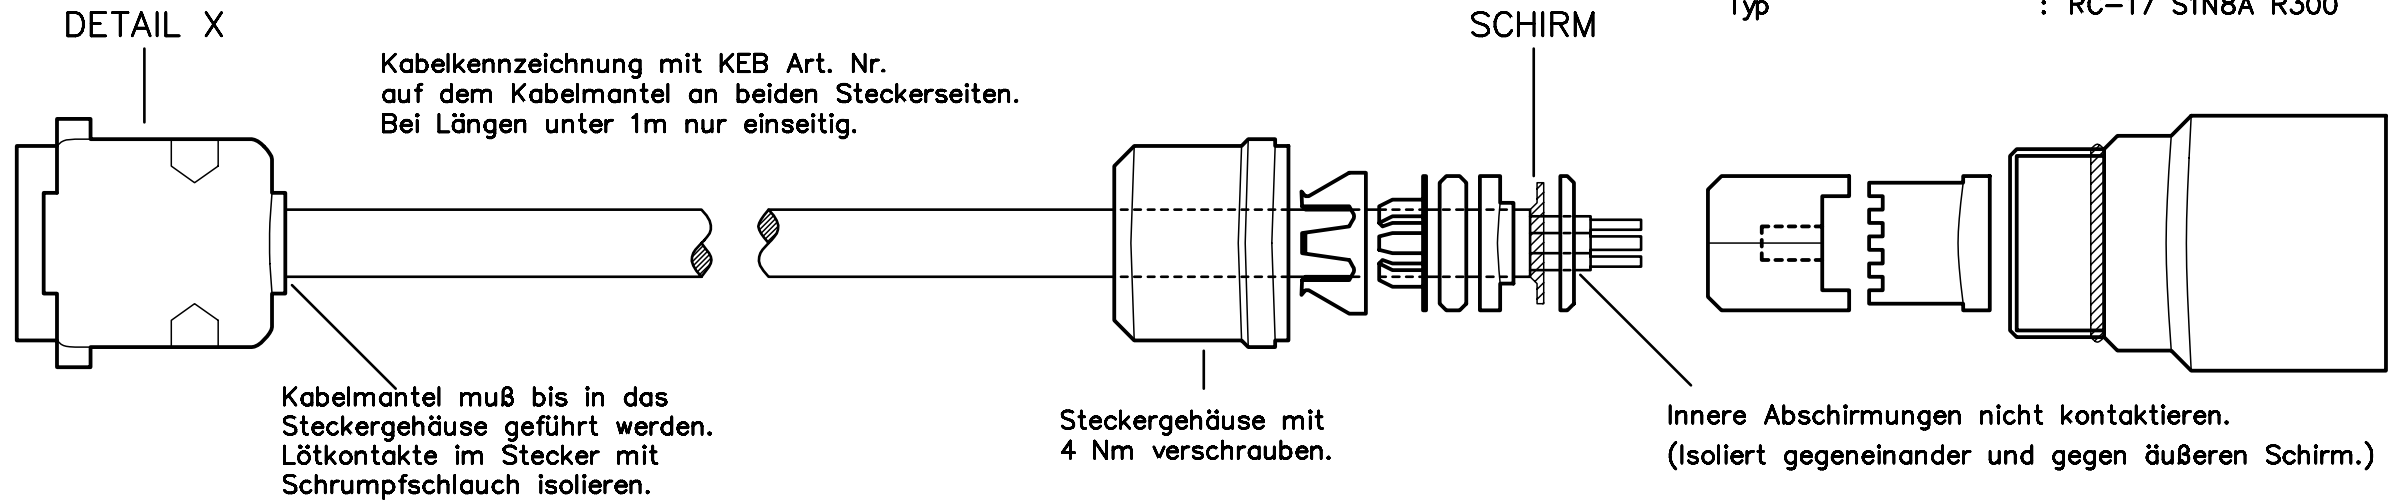

00.F5.0C1-4xPx KABELLAENGE x,x METER

00.F5.0C1-4xxx KABELLAENGE xxx METER

This drawing may not be duplicated nor retransmitted to others without our prior permission. Any improper use is forbidden.

Auto - CAD

Ohne unsere vorherige Zustimmung darf diese Zeichnung weder vervielfältigt, noch Dritten zugänglich gemacht werden, und sie darf durch Empfänger oder Dritte auch nicht in anderer Weise mißbräuchlich verwendet werden.

Änderungen : / Modifications	g				Rohmaß: / Rough size:	Ident-Nr.:	Menge: / Qty.:	ME	Werkstoff: / Material:	Rohteil-Nr.: / Blank-No.:	Benennung: / Title:	Kantenbruch/Break of sharp edges		
	f										Geberkabel F5			
	e										Zeichnungs-Nr.: / Drawing No.:		Datum	Name
	d					verzinkt, blau passiviert / Schichtdicke: zinc-plated, blue passivated / Thickness of coat:	µm	Schutzvermerk DIN 34 beachten Observe protection note DIN 34			05.04.02		Horn	✓ = √ Rz 100
	c					Allgemeintoleranz DIN 6930-m general tolerance	Tolerierung ISO 8015 Tolerancing	Oberflächenangaben DIN ISO 1302 Surface details	Werkstückkanten DIN 6784 Workpiece edges		00.F5.0C1-4005		gepr.:	✓ = √ Rz 25
b					Keine Maße aus der Zeichnung abnehmen/Do not scale					Alle Maße in Millimeter/All dimensions in millimetres		Format Size	Maßstab Scale	✓ = √ Rz 6,3
a												geschliffen/ground	✓ = √ Rz 4	
Nr.:	Datum	Name	Paßmaß Size of fit	Abmaß Deviation								1:1		

KEB Karl E. Brinkmann GmbH
ANTRIEBSTECHNIK D 32677 Bartrup

Stiftsteckverbinder : SUB-D 15 pol.
 Metallgehäuse mit Schirmanbindung
 Gehäusebreite max 31 mm

Kabel : (4 x (2x0,25) + 2 x 1,0)
 Geeignet für Energieführungsketten
 Helukabel Topgeber 510 77750
 Aderfarbkode nicht nach DIN 47100




Buchsensteckverbinder : Metallgehäuse mit
 Schirmanbindung, Kontaktbuchsen

Hersteller 1 : Intercontec
 Typ : ASTA 035 FR 11 12 0005 000

Hersteller 2 : Interconnectron
 Typ : SPN A 17B NN NN 169

Hersteller 3 : Coninvers
 Typ : RC-17 S1N8A R300

CABLE LENGTH OVER 40 METERS

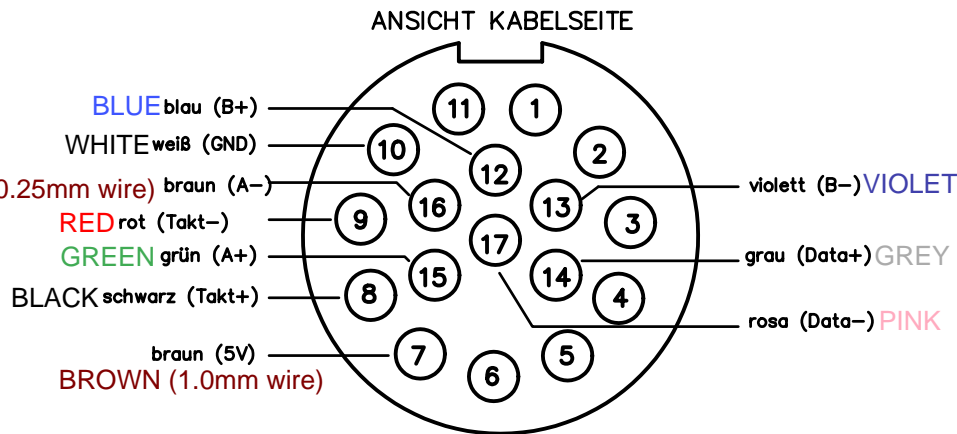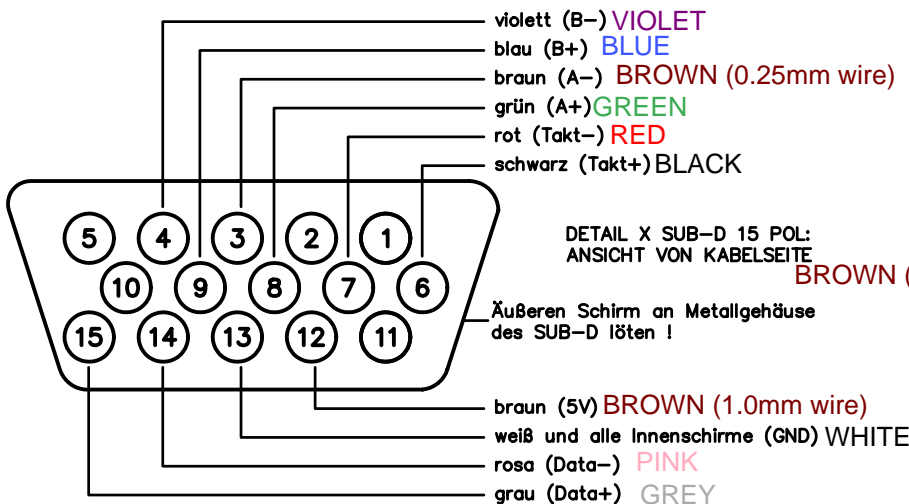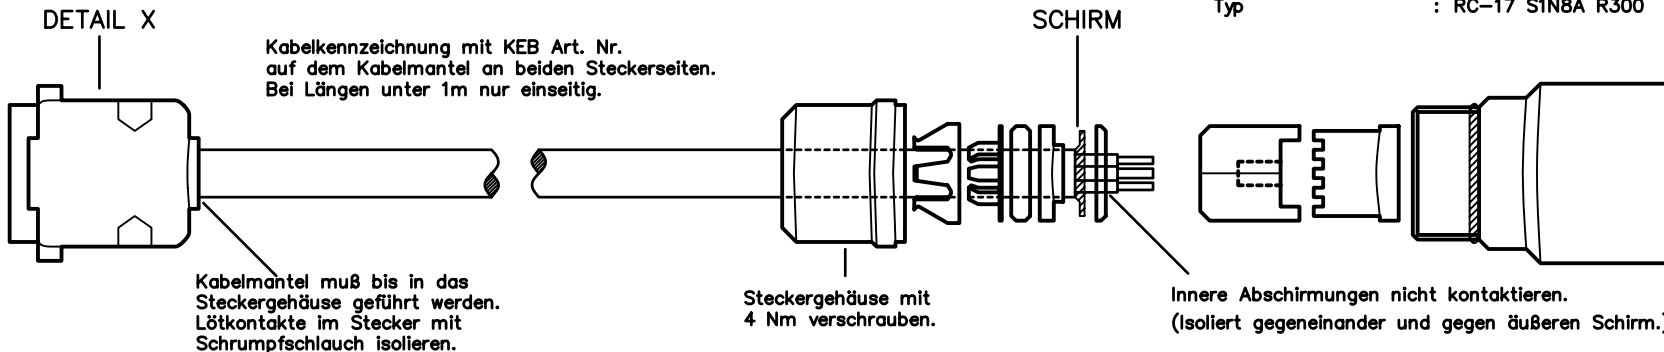

00.F5.0C1-LxPx KABELLAENGE x,x METER

00.F5.0C1-Lxxx KABELLAENGE xxx METER

g		Rohmaß: /Rough size		Ident-Nr.:		Menge: /Qty.:		ME		Werkstoff: /Material:		Rohteil-Nr.: /Blank-No.:		Benennung: /Title		Kantenbruch/Break of sharp edges	
f														Geberkabel F5			
e														Zeichnungs-Nr.: /Drawing No.:		Datum Name	
d														00.F5.0C1-L005		15.06.07 Horn	
c														gez.:		√ = √ Rz 100	
b														gepr.:		√ = √ Rz 25	
a														Format		Maßstab Scale	
Nr.:		Datum		Name		Paßmaß Size of fit		Abmaß Deviation		Keine Maße aus der Zeichnung abnehmen/Do not scale		Alle Maße in Millimeter/All dimensions in millimetres		Karl E. Brinkmann GmbH ANTRIEBSTECHNIK D 32677 Bartrup		√ = √ Rz 6,3 geschliffen/ground √ = √ Rz 4	

Ohne unsere vorherige Zustimmung darf diese Zeichnung weder vervielfältigt, noch Dritten zugänglich gemacht werden, und sie darf durch Empfänger oder Dritte auch nicht in anderer Weise mißbräuchlich verwendet werden.

Auto - CAD

This drawing may not be duplicated nor retransmitted to others without our prior permission. Any improper use is forbidden.




Hollister-Whitney Elevator Corporation

#1 Hollister-Whitney Parkway
Quincy, IL 62305
Phone: 217-222-0466

Fax: 217-222-0493
e-mail: info@hollisterwhitney.com
www.hollisterwhitney.com

GERMAN

ENGLISH

ROT  RED

BLAU  BLUE

GELB  YELLOW

GRÜN  GREEN

VIOLETT  VIOLET

SCHWARZ  BLACK

BRAUN  BROWN

WEIß  WHITE

ROSA  PINK

GRAU  GREY